For Style 1218P24 Assembly Instruction Sheet #IS-1218P24

ole Required: Flathead acrevolriver, Philips acrevolriver, plien, wire outlans, wire adoppers, electrical tape, eatily glasses.
It Seuros: (1): 120V LED 11V (INMANSE (4000K)
Installed Amessably Timer: 10-20 inhulas
specificit; (Serifly and Import at parts before beginning installation. Check package content list and diagrams below to be sure all parts are
pendion; (Serifly and Import at parts before beginning Installation. Check package content list and diagrams below to be sure all parts are
pendion; if any parts are missing or damaged, do not allampt to assemble, install, or operate the third.

Turn off electricity at circuit breaker or main fuse box before installation. Consult a floansed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the thiure. We strongly recommend that a floansed, professional electrician parform the installation.

Disconnect fixture from power source before replacing bufbs. Make sure bufbs are given sufficient time to cool before removal

Package Contents


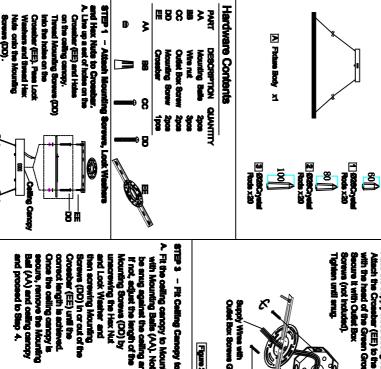


Figure 2

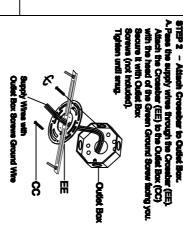

A. Fit the ceiling canopy to Mounting Screwe (DD) and secure with Mounting Balls (AA). Note: The ceiling canopy should be arug against the ceiling and the Mounting Balls (AA). If not, adjust the larger of the STEP 3 — Fit Calling Canopy to Crossber Assembly Screws (DD) in or out of the Crossber (EE) until the orrect length is achieved. necrowing the Hex Nut founting Screws (DD) by nd Look Washer and an acrewing Mounting

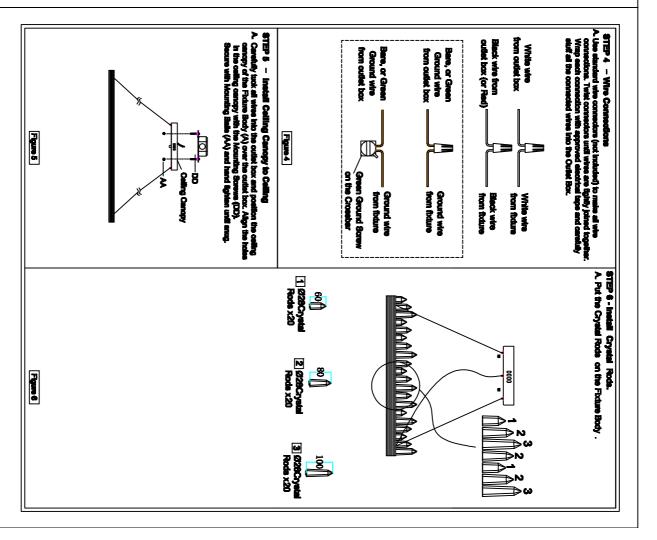


Figure 3

2 of 2