

ASSEMBLY INSTRUCTIONS


Item NO.: BO-2979TB

Carefully place all parts on smooth surface to assembly.

1. SCREW SOCKET PART (B) ONTO THE BASE (A) ;
2. INSERT HARP (C) TO THE BRACKET OF THE SOCKET;
3. PUT SHADE (D) ON HARP (C) AND TIGHTEN BY FINIAL (E);
4. INSTALL RECOMMENDED BULB (NOT INCLUDED IN THIS PACKING).
5. LOOSE THE HANDLE ON SOCKET PART (B) AND PULL/PUSH THE POLE TO DESIRED HEIGHT AND TIGHTEN THE HANDLE AGAIN.

INSERT PLUG INTO AN OUTLET AND ENJOY YOUR LAMP!!

**Use Max 150W type A bulb
(bulb not included)**

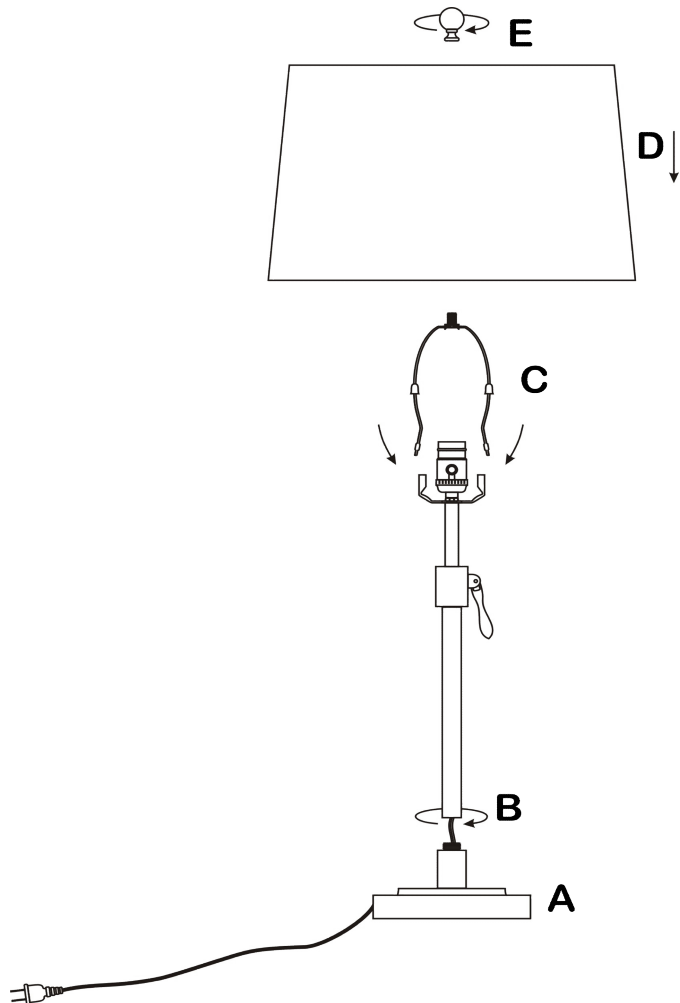

** TO REDUCE THE RISK OF ELECTRIC SHOCK, ALWAYS UNPLUG FROM THE ELECTRICAL OUTLET BEFORE INSTALLATION.*

** THIS FIXTURE IS SUITABLE FOR DRY LOCATION ONLY.*

** THIS FIXTURE SHOULD ONLY BE CLEANED WITH A SOFT LINT FREE CLOTH DAMPLED WITH WATER. DO NOT USE ANY CHEMICAL OR ABUSIVE CLEANER AS THEY MAY DAMAGE THE SURFACE OF THE PRODUCTS.*

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.