

ASSEMBLY INSTRUCTIONS


ITEM NO: BO-3174FL

CAREFULLY UNPACK AND PLACE ALL PARTS
ON A SMOOTH SURFACE.

1. SCREW POLE (G) TO BASE (H).
2. SCREW POLE (F) TO BASE (G).
3. SCREW POLE (E) TO BASE (F).
4. SCREW SOCKET PART (D) TO POLE (E).
5. INSERT HARP (C) INTO THE SADDLE OF SOCKET PART (D).
6. PUT SHADE (B) ON SADDLE (C) AND TIGHTENED BY FINIAL (A).
7. INSTALL RECOMMENDED BULB AN INSERT THE CORD INTO AN OUTLET.

YOUR LAMP IS NOW READY TO ENJOY!!!

**Use 3-WAY 150 Wattage type A
bulb (bulb not included)**

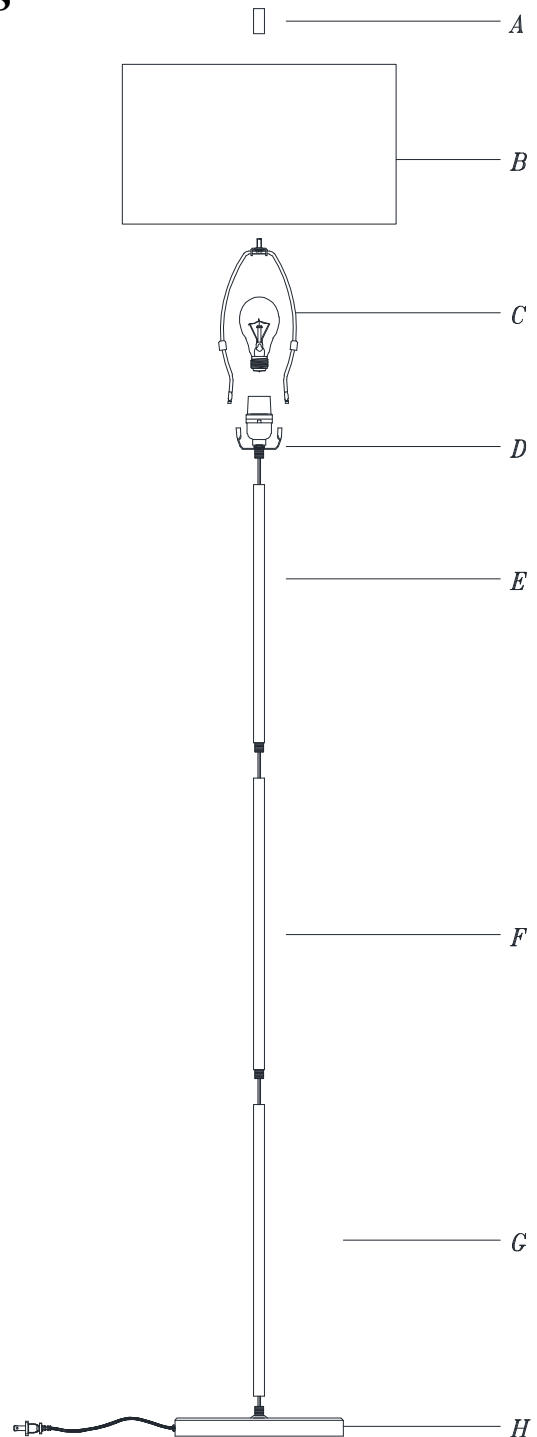

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.