ASSEMBLY INSTRUCTIONS

ITEM NO: BO-3801FL


CAREFULLY PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP PER THE SKETCH BELOW.

- 1. SCREW THREAD (B) THROUGH LOWER FOOT (A) POLE INTO UPPER FOOT POLE (G), SCREW WASHER (C) TO THREAD POLE (B)AND TIGHTEN WITH NUT (D) USING SPANNER (E).
- 2. STICK THE PLASTIC CUSION PAD (F) AT THE END OF LOWER FOOT (A).
- 3. TIGHTEN THE UPPER FOOT IN MAIN BODY (G) BY SCREW (H).
- 4. THREAD CENTER POLE (I) INTO THE SOCKET PART OF MAIN BODY (G).
- 5. PUT THE METAL SHADE (J) ON TOP OF THE THREAD (I) AND TIGHTEN WITH WASHER (K) AND FINIAL (L).
- 6. INSERT THE PLUG INTO AN OUTLET.

ENJOY!

*** This LED light provides low maintenance service with no bulbs to change. ***

Use Max 18W LED bulb (bulbs Included)

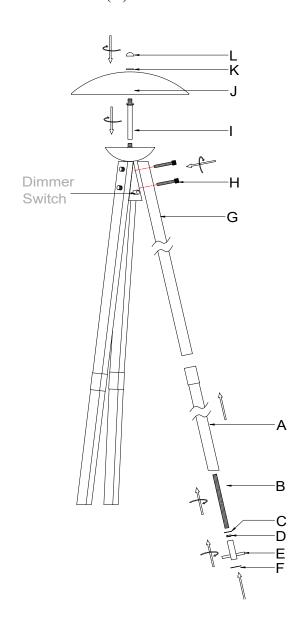

- * TO REDUCE THE RISK OF ELECTRIC SHOCK, ALWAYS UNPLUG FROM THE ELECTRICAL OUTLET BEFORE INSTALLATION.
- * THIS FIXTURE IS SUITABLE FOR DRY LOCATION ONLY.
- * THIS FIXTURE SHOULD ONLY BE CLEANED WITH A SOFT LINT FREE CLOTH DAMPLED WITH WATER. DO NOT USE ANY CHEMICAL OR ABUSIVE CLEANER AS THEY MAY DAMAGE THE SURFACE OF THE PRODUCTS.

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.