

# MODERN FORMS SMART FANS

## FT-1820-8-BK

### INSTALLATION INSTRUCTIONS

#### FAN PERFORMANCE CHART

Model	POSITION 1				POSITION 2				POSITION 3			
	Current (A)	Power (W)	RPM rev/min	Noise dBA	Current (A)	Power (W)	RPM rev/min	Noise dBA	Current (A)	Power (W)	RPM rev/min	Noise dBA
FT-1820-8-BK	0.08	9	1300	38	0.09	11	1400	40	0.12	14	1500	42

Specifications are subject to modification without prior notice as part of the company's continuous improvement program.

#### READ AND SAVE THESE INSTRUCTIONS

Please read these instructions carefully before use for safety and product reliability.

Please keep these instructions stored for future reference.

#### TROUBLESHOOTING

Please follow the checklist below if the fan is not working properly during use.

If the fan does not run after being switched on:

- Check if the plug is securely connected to the outlet
- Check if the plug is knotted or tangled.
- Check if the fan blade and the guard are jammed

If the fan blade rotates slowly, irregularly, or with abnormal noises:

- Check if the fan blade and guard are securely fitted.
- Check if the fan blade and guard are locked.

Please unplug the fan and contact the local sales point or our company if the fan cannot properly function after checking the steps above.

#### MAINTENANCE

- Please unplug the fan from the outlet and clean it with a soft cloth.
- Do not wet or immerse the switch, motor, or oscillating parts in water.
- Please fit the cover onto fan after maintenance and when the fan is not in use.

**Attention:** The fan must be unplugged during maintenance. Do not touch the fan when your hands are wet.


#### STORAGE

- Retain the fan's original packaging materials.
- Please detach the fan in opposite order of fan assembly
- Please put all the components into the original packaging in their designated compartments.

#### HOW TO DETACH THE GUARD

1. Unscrew the front screws along the edge of the front guard and the back guard.
2. Take out the front guard from the top fixing clip and detach the front guard from the back guard
3. The assembly sequence is in opposite order of detachment.

#### ASSEMBLY INSTRUCTIONS

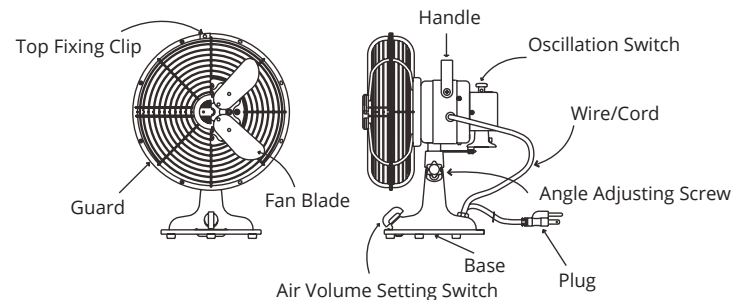

#### WARNINGS:

1. Unplug the fan before maintenance. Do not touch the fan if your hands are wet.
2. Do not connect the fan to main supply power or fit the adjusting screw before assembly of the fan blade and guard.
3. Do not connect to main supply power or switch on the fan before assembly is completed.
4. Those who are not qualified electricians should not disassemble, repair or rebuild the fan.
5. Unplug the fan when it is not being used.
6. Do not unplug fan by holding the cable cord. Unplug by holding the flexible connector.
7. Do not use the fan if the cord or plug has been damaged, or if the power socket is loose.
8. Do not make repairs when there is damage to the cord.
9. Do not load the fan with dual cords or bin the cord.
10. Do not use the fan near any of the following: gas stove or any fire source, unusually humid or high temperatures, oil soot with a lot of metal powder, or unstable places not good for oscillation.
11. Do not insert your hand into the guard, or the movable parts.
12. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
13. Place the fan on a smooth level surface.
14. Children should be supervised to ensure that they do not play with the appliance.
15. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified personnel in order to avoid a hazard.