Q UOIZEL 6 CORPORATE PARKWAY GOOSE CREEK, SC. 29445 www. quoizel. com

Quoizel, Inc. 6 Corporate Parkway Goose Creek, SC 29445

Customer Service Phone 631.273.2700 Fax 631.231.7102 www.quoizel.com

Assembly Instruction Sheet #IS-ER353BN For Style ER353BN

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

 $\textbf{Bulb Recommended:} \ (3) \, \textbf{Medium Base 100W bulbs Maximum}, \textbf{Alternate bulb (3) 23W CFL Maximum}.$

Estimated Assembly Time: 30-45 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

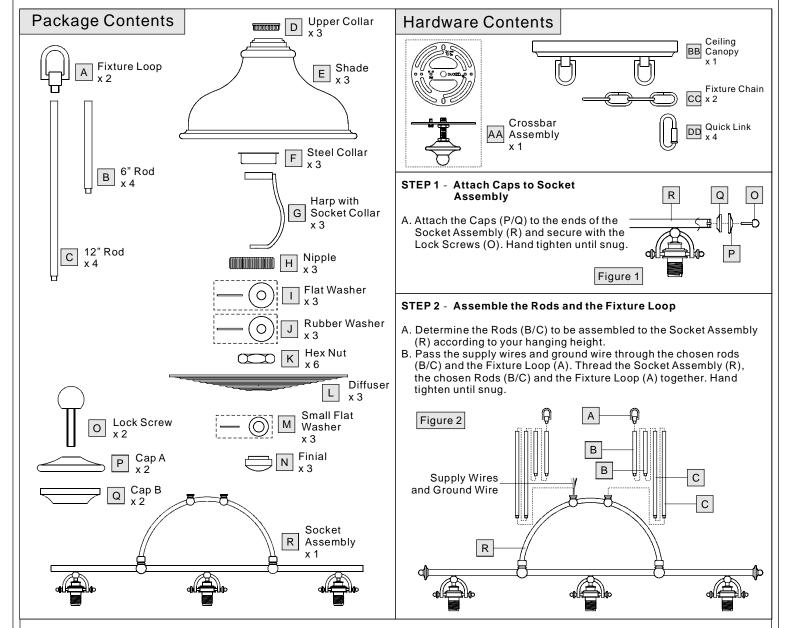

Thank you for purchasing a Quoizel product.

Need assistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700 or visit us on-line at www.quoizel.com

March2014

STEP 3 - Install Fixture Chains

- A. Adjust the Fixture Chain (CC) to your desired length by removing the links if needed.
- * Pliers is required for this step.
- B. With the Fixture Chain (CC) not attached to the Fixture Loop (A) and the Canopy Chain Loop, pull the supply wires through the Fixture Chain (CC) alternating links. After the wires are through the Fixture Chain (CC), pull the Supply Wires and the Ground Wire through the Ceiling Canopy (BB).
- C. Attach one ends of the Fixture Chains (CC) to the Fixture Loop (A) with two

(CC) to the Fixture Loop (A) with two
Quick Links (DD) as shown. Lift the fixture and Fixture Chains (CC)
up and attach the other ends of the Fixture Chains (CC) onto the
Canopy Chain Loop underside of the Ceiling Canopy (BB) with the
rest two Quick Links (DD).

Supply

Wires


Suggested rods and chain length for Ceiling height:

8' ceiling: use (1)6" rod and 2 quick links

9' ceiling : use (1)12" rod, 5 links of chain and 2 quick links 10' ceiling : use (2)12" rods, 5 links of chain and 2 quick links


STEP 4 - Separate parts from Crossbar Assembly

 A. Remove the Finial, the Covers, and the Lock Washer from the Crossbar Assembly (AA).

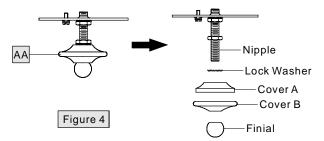


STEP 5 - Install Crossbar

A. Attach the Crossbar (AA) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

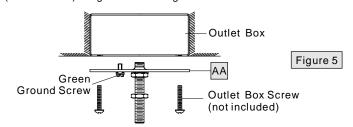

STEP 6 - Wire Connections

- A. Use standard wire connectors (not included) to make all wire connections. (Connectors are not included with fixture.) Strip and prepare wire ends according to instructions supplied with connectors.
- B. Connect White Supply Wire from the Outlet Box to Ribbed side Wire

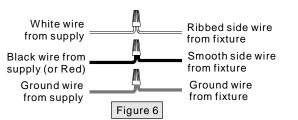

from fixture.

ВВ

Loop

DD

CC

DD


A

Ceiling

- C. Connect Black (or Red) Supply Wire from the Outlet Box to Smooth side Wire from fixture.
- D. Connect Ground Wire from the Outlet Box to Ground Wire from fixture.
- E. Twist connectors until wires are tightly joined together.
- F. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.


STEP 7 - Install Ceiling Canopy

A. Attach the Lock Washer, the Ceiling Canopy (BB) and the Covers over the end of the Nipple as shown. Secure by threading the Finial onto the Nipple. Hand tighten until snug.

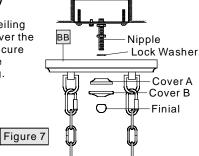

STEP 8 - Install Shade


A. Place the Upper Collar (D), the Shade (E) and the Steel Collar (F) in turn and secure with the Harp with Socket Collar (G). Hand tighten until snug.

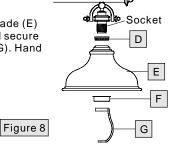

STEP 9 - Install Bulb

A. This fixture uses standard bulb with medium base. Maximum 100 watts.

B. Insert bulb and screw snugly into place.

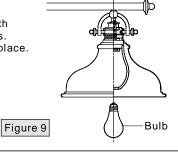


STEP 10 - Install Diffuser

A. Thread one Hex Nut (K) to the Nipple (H) approx half way. Screw the Nipple (H) into the bottom end of the Harp (G) and tighten until snug. By using pliers, thread the Hex Nut (K) against the Harp (G) and hand tighten until snug.

B. Thread another Hex Nut (K) onto the end of the Nipple (H) and adjust it to proper location for rest components. Attach the Flat Washer (I), the Rubber Washer (J), the Diffuser (L) and the Small Flat Washer (M) over the Nipple (H) in turn. Secure them with the Finial (N) and hand tighten until snug.

 Your fixture is now assembled and ready to use. Enjoy!



Н

Thank you for purchasing a Quoizel product.

Need a ssistance with parts or assembly? Call Quoizel customer service at 1-631-273-2700

or visit us on-line at <u>www.quoizel.com</u>

G

Κ

