


### Installation Guide

# For Styles PCFN1716DSL, PCFN1716EK and PCFN1716W

# **Tools Required**

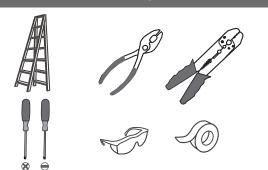

# **Light Source**

30W

### Fixture Height Adjustable 10" to 99.5"

# ⚠ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

# **Package Contents**

 
**Preparation**: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

#### **PARTS BAG**



Inner Backplate







Outlet Box Screw x 2



D Wire Connector

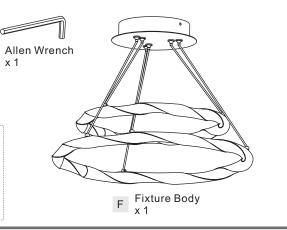

#### Table of **Contents**

 

Adjust


STEP 1


**Inner Backplate** 



  STEP 2


Wiring







#### STEP 1

  Option 1: Semi-Flush





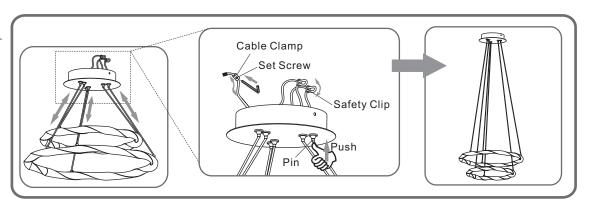

©2019 QuoizelInc.

visit us on-line at www.quoizel.com

Released Date: 2019-09-29

# STEP 2

