



Tools Required

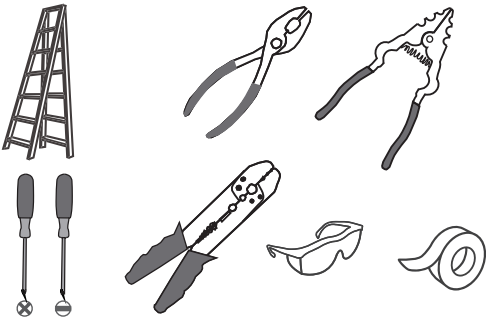

Light Source

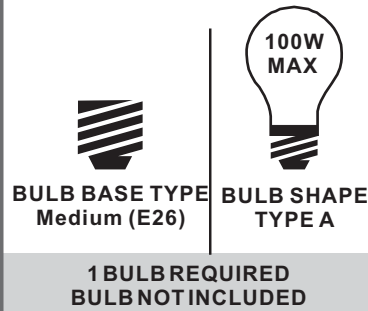

**Fixture Height Adjustable
26.5" to 74.5"**

Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.



Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.


PARTS BAG

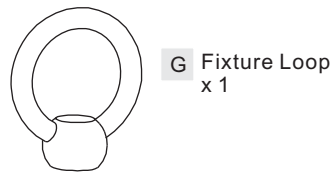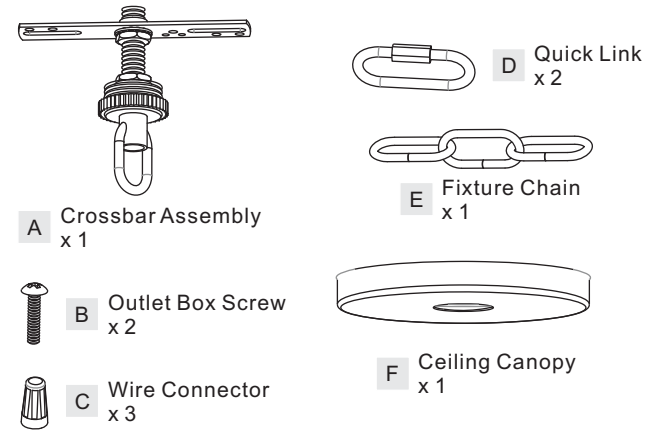

G Fixture Loop x 1



 I Shade x 1



H Fixture Body x 1




J Decorative Part x 1

Table of Contents

Fixture Loop	Crossbar Assembly	Fixture Chain	Wiring	Ceiling Canopy	Bulb
STEP 1	STEP 2	STEP 3	STEP 4	STEP 5	STEP 6

 
STEP 1



STEP 2


1

Step 1
Install crossbar assembly

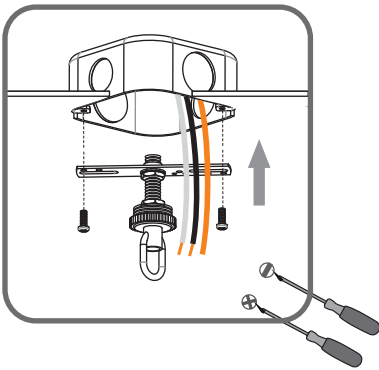


2

Step 2 - 3
Test fitting ceiling canopy to nipple

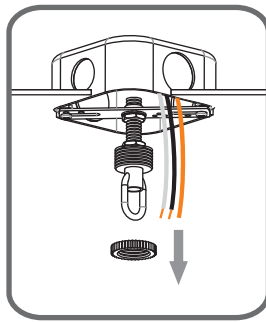


3

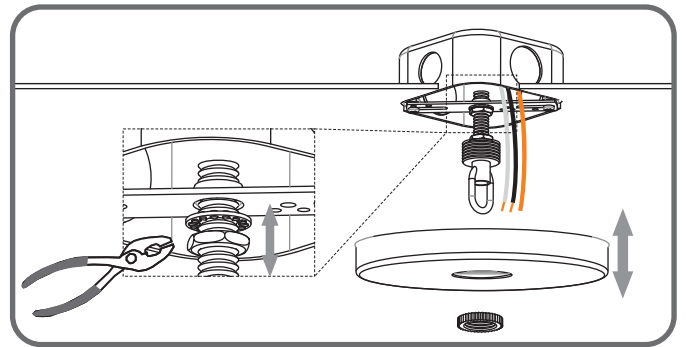

STEP 3


1

Step 1
Adjust fixture chain length

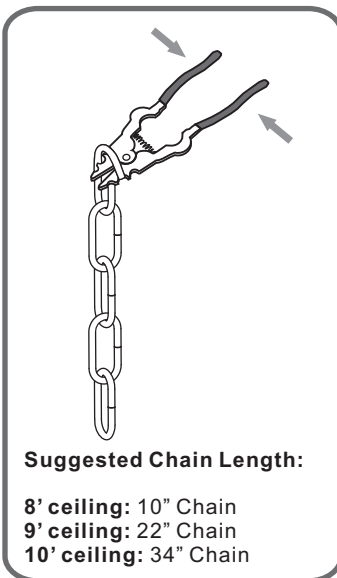


2

Step 2 - 3
Install Fixture Chain

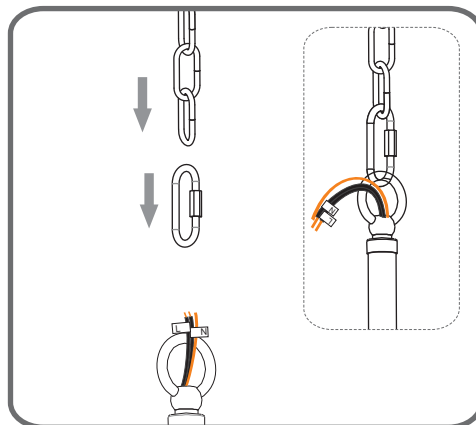


3

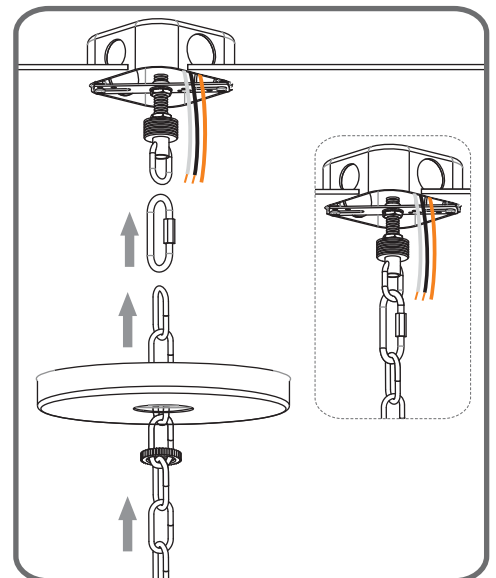


STEP 4

1



Step 1
Feed the fixture wires
through the loop

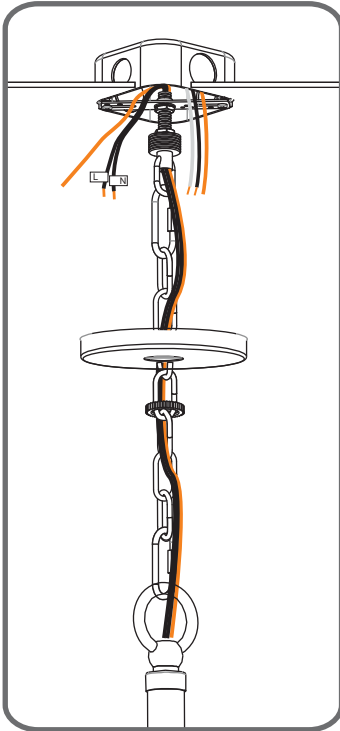

2

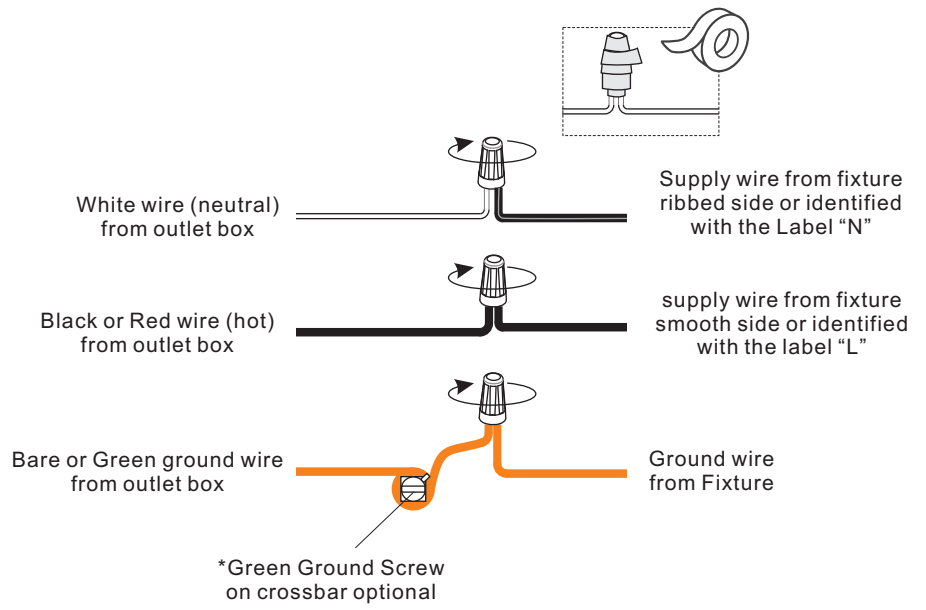

STEP 5

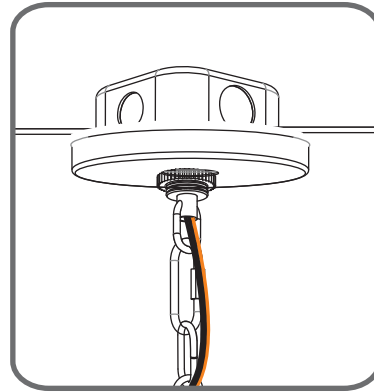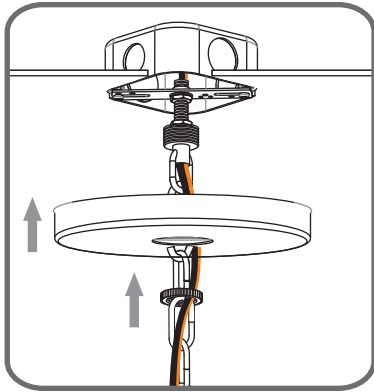

STEP 6

