


SkyOutlet INSTALLATION MANUAL

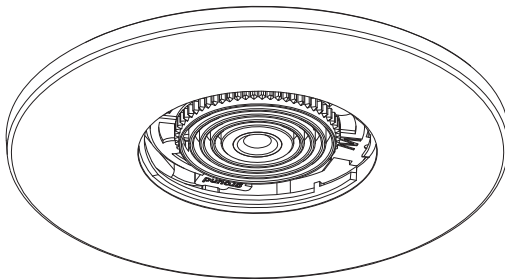

For Models:



- #1005-1 SkyOutlet 1 Pack
- #1005-4 SkyOutlet 4 Pack
- #1005-8 SkyOutlet 8 Pack
- #1005-24 SkyOutlet 24 Pack



View Instructional Video
before beginning



Parts Included:

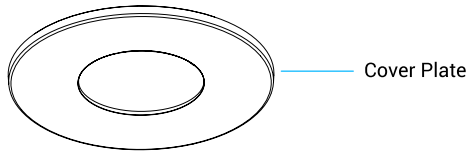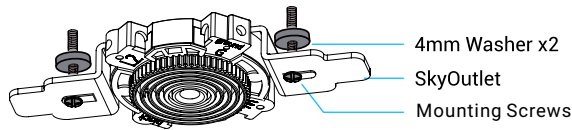

Use when cleaning & painting
or when fixture is not in use.



4mm Washer x2

7mm Washer x2




Jumper Lead
(optional)

IMPORTANT SAFETY INFORMATION

1. Disconnect power by turning off the circuit breaker or by removing the fuse at the fuse box. (All electrical steps should be performed by a qualified person or electrician.)
2. Ensure wiring and outlet box are compliant with national and local electrical codes, including the NEC. SkyOutlet requires installation on the branch circuit solid 12 or 14 AWG wire. Electrical Rating: 125V AC 15A 60Hz.
3. SkyOutlet for use with SkyPlug Model SPU-3L, SSPU-3L (sold separately) and outlet box cover plate (included).
4. Suitable for luminaire support max 50 lbs. Use min. size 4" x 1/2" box.

Prepare for SkyOutlet Installation

Push the middle of SkyOutlet to separate cover plate and SkyOutlet

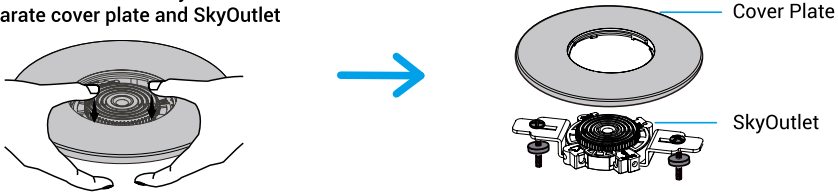


SkyOutlet Wiring and Installation


IMPORTANT: Disconnect power by turning off the circuit breaker or by removing the fuse at the box. All electrical steps should be performed by a qualified person or electrician.

1 Wire SkyOutlet to ceiling junction box.


1. Strip wire to 9/16"/14mm.

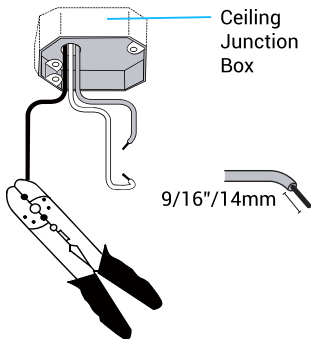


2. Loosen terminal screws to insert branch circuit wires into the corresponding terminals. Tighten to secure wires. Check to make sure wires are securely inserted into terminals. Set screw torque value at 6.3 lb/in.

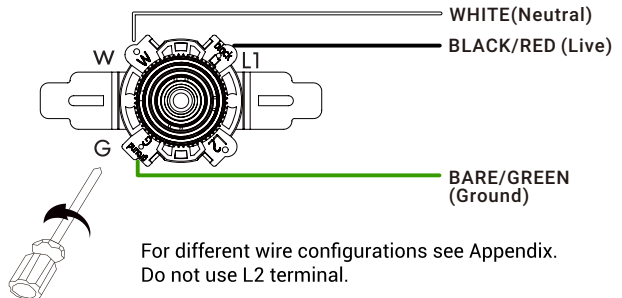


2 Secure SkyOutlet to outlet box using 2 screws and washers (included).

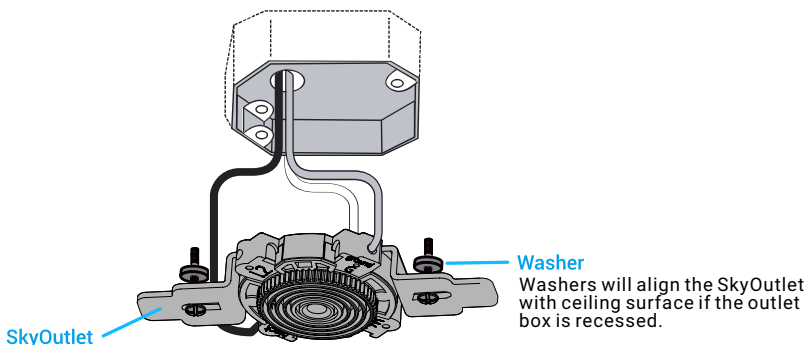


IMPORTANT: If your box is flush with ceiling or recessed less than 1.5 mm (0.06"), use 4 mm washer. If recessed between 1.5 mm (0.06") and 3 mm (0.12") use larger 7 mm rubber washer. If recessed more, use combination of both washers.

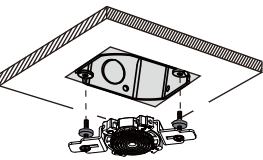

4mm rubber washer


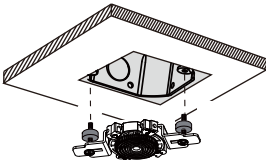


7mm rubber washer


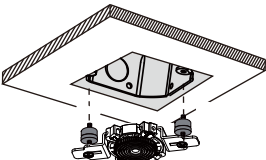


4mm rubber washer
7mm rubber washer


3 Secure cover plate as shown.

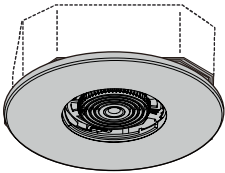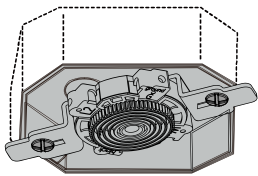

Align tabs on the cover plate with the SkyOutlet bracket and press to secure in place.

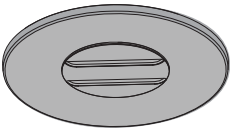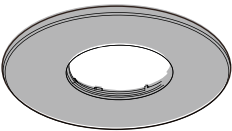

NOTE: A center cap is provided to cover and protect the SkyOutlet when the light fixture is removed for painting, maintenance, etc. To install the center cap, align the two slots on the cover plate and turn to secure.

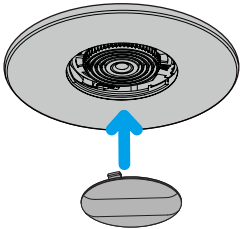


APPENDIX


Additional Wiring Diagram

IMPORTANT: If you have multiple wires inside your outlet box, you will need to determine which lead is the live or switched lead and insert this lead into L1. If you are not sure how your house is wired, contact 1-866-885-4649 for questions or contact an electrician. When multiple wires are connected together use a solid wire 12 or 14 AWG JUMPEP LEAD (included) to insert into the receptacle terminal. **Do not use L2.**


WIRING DIAGRAM #1:

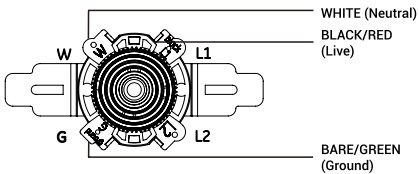


WIRING DIAGRAM #4:

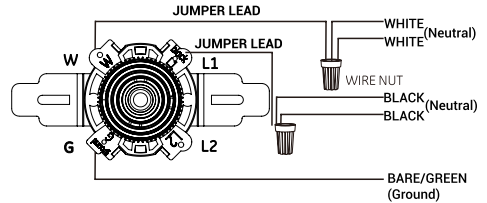


WIRING DIAGRAM #2:

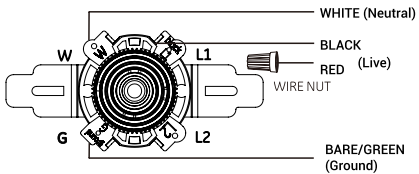

WIRING DIAGRAM #5:

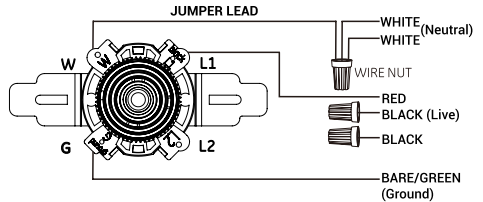

WIRING DIAGRAM #3:

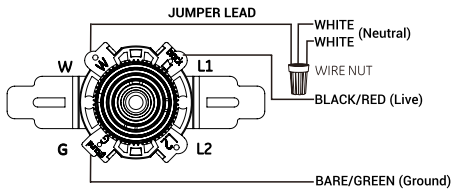

NOTE: If you have multiple wires connected together, add the included **JUMPER LEAD** and insert jumper lead into terminal. Only one single wire can be inserted into terminal (See diagram 3-5).

WARRANTY

LIMITED 1 YEAR WARRANTY

SKYX Platforms Corp. (SKYX), provides this limited warranty to the purchaser (Purchaser) of SKYX's SkyOutlet Wiring Assembly Kit (Product). This warranty is not assignable or transferable to any party.

This Product is warranted against any electronic or mechanical defects for a period of one (1) year from the date of original purchase (Warranty Period). SKYX will repair or, at its option, replace the defective Product or component parts without charge if, within the Warranty Period, the Product has been proven to be defective and is returned by Purchaser to SKYX with satisfactory proof of purchase. Any replacement or repaired Product or components will be warranted to the original Purchaser for the remaining portion of the Warranty Period. This warranty does not cover any Product (a) installed by any party other than SKYX; (b) that has been subject to neglect, accident, abuse, improper wiring, incorrect voltage or any other forms of misuse; (c) that has been used in a manner inconsistent with the warnings and instructions contained in the product documentation; (d) that appears to have been opened, disassembled or tampered with; or (e) purchased from a third-party. This warranty does not cover costs for removal or installation of the Product for repair.

EXCEPT FOR THE LIMITED WARRANTY SET FORTH ABOVE, SKYX EXPRESSLY DISCLAIMS ALL WARRANTIES WITH RESPECT TO THE PRODUCT, EITHER EXPRESS, IMPLIED OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT, TITLE AND NON-INFRINGEMENT.

To obtain warranty service, email support@skyplug.com.

LIMITATION OF LIABILITY

TO THE MAXIMUM EXTENT NOT PROHIBITED BY LAW, IN NO EVENT AND UNDER NO CIRCUMSTANCES SHALL SKYX BE LIABLE TO THE PURCHASER OF ITS PRODUCT OR ANY THIRD PARTY FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, LOSS OF DATA, LOSS OF GOODWILL, BUSINESS INTERRUPTION OR ANY OTHER DAMAGES OR LOSSES, ARISING OUT OF OR RELATED TO PURCHASER'S POSSESSION OR USE OF THE PRODUCT, HOWEVER CAUSED, REGARDLESS OF THE THEORY OF LIABILITY (WHETHER BY BREACH OF CONTRACT, WARRANTY, NEGLIGENCE, STRICT LIABILITY IN TORT, OR OTHERWISE) AND EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT WILL SKYX'S TOTAL LIABILITY ARISING OUT OF OR RELATED TO THE PRODUCT, WHETHER ARISING OUT OF OR RELATED TO BREACH OF CONTRACT, TORT (INCLUDING NEGLIGENCE) OR OTHERWISE, EXCEED THE AMOUNT THE PURCHASER PAID FOR SUCH PRODUCT.