



UTTERMOST

ASSEMBLY AND INSTALLATION INSTRUCTIONS

STYLE# 21331

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Place the **Crossbar** over the **Canopy** and thread **Finial** onto the **Nipple#1** to secure it. Hand tighten until snug.
4. Adjust the length of wire needed for your installation, remove excess. Adjust **Chain** length as needed. Thread **Quick Link#1** into **Loop #1** on the **Canopy**, then **Quick Link #2** into **Loop #2** on the **Lamp Body**. Hand tighten until snug.
5. Pass the supply wires through the **Part A** and **Canopy**. Thread the Part A to connect the **Nipple #2** of the **Lamp Body**. Hand tighten until snug.
6. The power supply wire consists of three wires, one black wire, one white wire and one silver ground wire.

Connect the wires as shown. **A.** Connect the House Ground Wire to the Fixture Ground Wire.

B. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side).

C. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side).

D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.

7. Place the **Neck** of the **Part A** into **Gap** of the **Fabric Shade** as shown. Pass the **Bolts** one the **Fabric Shade** through the **Holes** on the **Part A** and secure with **Lock Ball**. Hand tighten until snug.
8. Install the correct **Bulb** (No Included) onto the **Socket** referring to fixture markings and/or labels for maximum wattage.
9. Place the **Mesh Shade** carefully onto the **Metal Cup**.

Your installation is completed now. Restore electricity.

