

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 21541

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Be sure power to the installation point is OFF. Follow the steps below for assembly.
3. Remove the **Finial** under the **Canopy** from the Mounting Screws, and take out the **Cross Bar**. Attach the **Cross Bar** to the Outlet by using Two **Outlet Box Screws**.
4. The Rods hung length for each glass is preset as shown in the Assembly Instruction. You are welcome to adjust to your own need by adding exactly same Rod for each glass, i.e, if you want to add a 12" rod for one glass, then the rest of four glasses also need to add a 12" rod at the same time. Make sure to remove extra wire, making sure you don't leave it attached or tucked in the canopy.
5. After determine the number of **Rods** to be assembled to the **Fixture Body** as needed for your hanging height. Pull the Supply Wire with Ground Wire through the selected **Rods** and **Swivel**. Thread the **Rods & connect Nipple**. Hand tighten.
6. Pass the supply wire through the **Cross Bar** assembly, secure the **Cross Bar** to the Outlet Box with Outlet Box Screws.
7. Fasten the **Cross Bar** to the **Canopy**. Thread **Finial** to secure it. Hand tighten until snug.
8. For each of the 3 cords draw all of the wires together as follows:
 - a. Connect the House Ground Wire to the Fixture Ground Wire, secure with wire nut.
 - b. Connect the House White (or Ribbed) Wire to the Fixture Supply Wire (White or Ribbed Side), secure with wire nut.
 - c. Connect the House Black (or Red) Wire to the Fixture Supply Wire (Black or Smooth Side), secure with wire nut.
 - d. Carefully remove the excess wire and stuff all of the connected wires into the Outlet Box.

Tuck them carefully inside the Outlet box. (See Figure 1)

9. Place the null wire, white wire evenly against the null wire from the Outlet Box and place the live wire, black wire evenly against the live wire from the Outlet Box. (Connecting the Wire---See Figure 2)

10. Place the **Canopy** over the **Nipple** and secure with Nex Nut and **Finial**. Hand-tighten until snug.

11. Place **Glass Shade** instruction as below. (See Figure 3)

Step 1: Place the **Socket** to about 45 degree. Install correct **Bulbs** referring to fixture markings and/or labels for maximum wattage. (T30 Bulbs Included)

Step 2: Lift **Metal Cap** up through the **Socket** to allow enough space when placing **Glass Shade** into the **Socket**.

Step 3: Carefully turn back the **Socket** together with the **Glass Shade back** to Straight. And sit the **Glass Shade** onto the **Metal Rim**. Put the **Metal Cap** put down to cover the Glass top.

Step 4: Then remove the "U" **Plastic Protector** of the **Metal Cap**.

Your installation is completed now. Restore electricity.


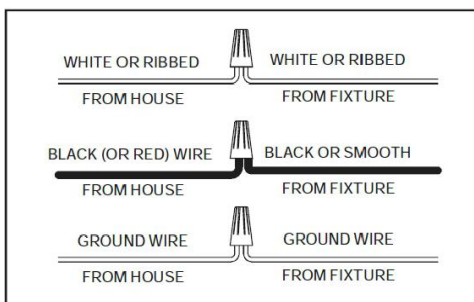 


Figure 1

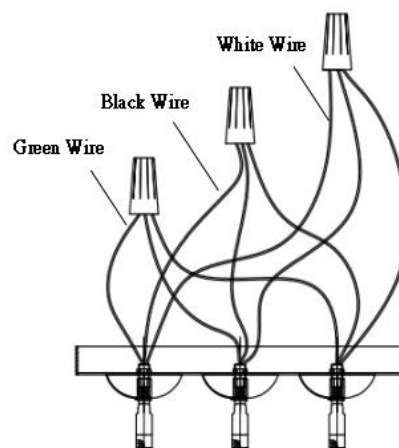 

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

 
 
www.uttermost.com

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 21541

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

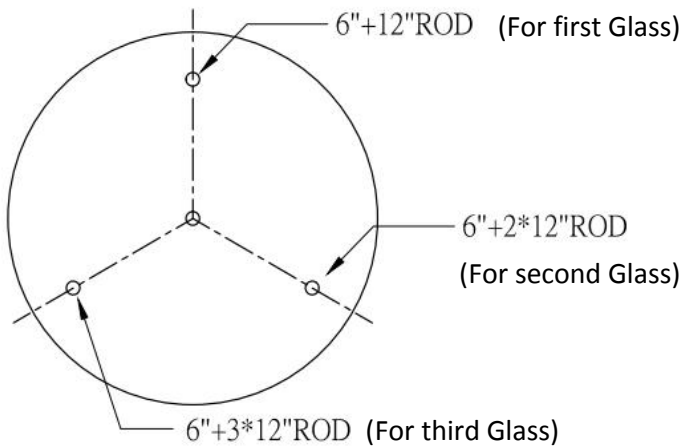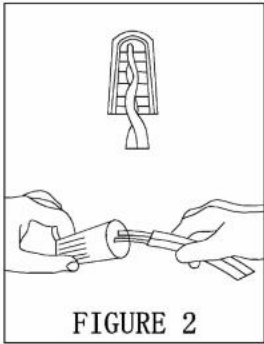

PRESET OF THE ROD HUNG LENGHT

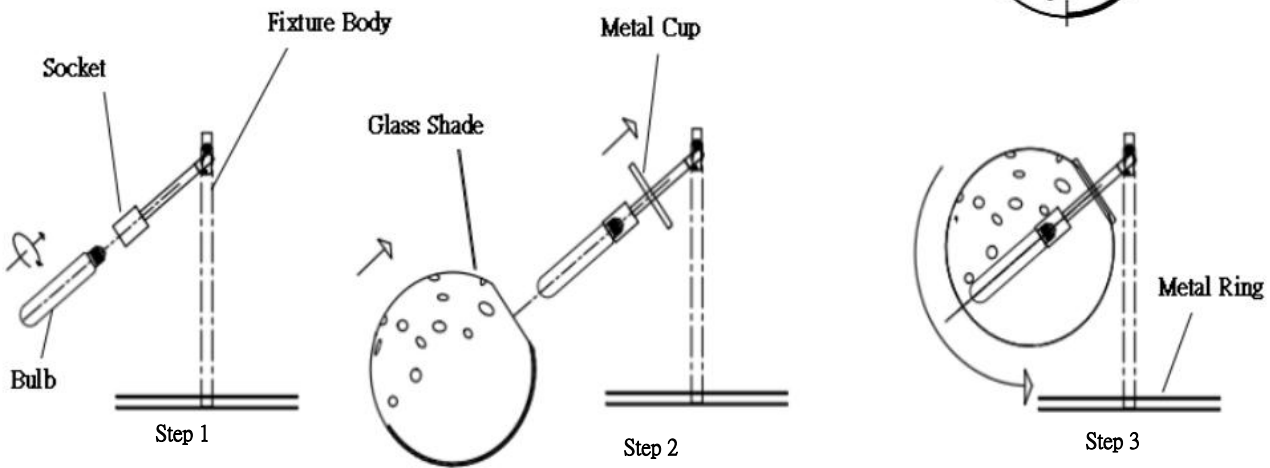 
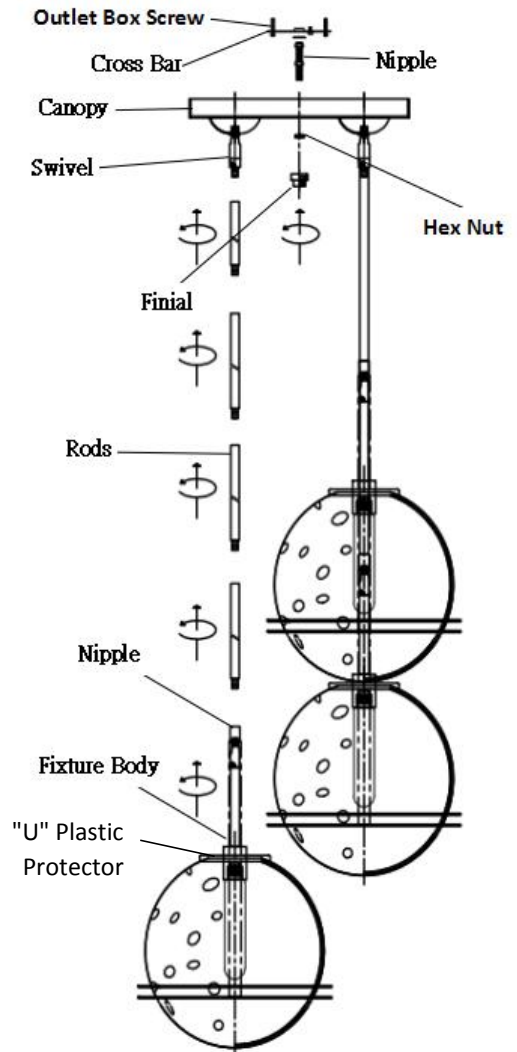 


Figure 3