## **ASSEMBLY INSTRUCTIONS**

UTTERMOST

## STYLE# 22098

## Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.


2. Be sure the power to the installation point is power off.

3.Fasten the Cross bar to the outlet box . Locate the Nipple and the washer, then thread them into the center of the Cross bar.

- 4.Secure the **nipple** onto the **ceiling canopy**.
- 5. Connect the fixture chain and the loop with the quick link.

6.Pass supply wire through the loop and quick link, then wind onto the fixture chain and thread from the center of the cross bar.

7.Install correct bulbs referring to fixture markings and/or labels for maximum wattage. (Not included)

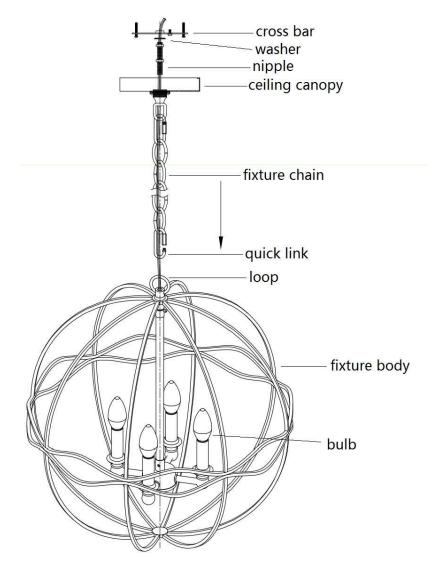

22098

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151 www.uttermost.com