




 

UTTERMOST

# ASSEMBLY INSTRUCTIONS

## STYLE# 22112

Carefully unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Be sure the power to the installation point is power off.
3. Fasten the **Cross bar** to the outlet box. Locate the **Nipple** and the **Washer**, then thread them into the center of the **Cross Bar**.
4. Secure the **Nipple** onto the **Canopy**.
5. Connect the **Chain** and the **Loop** with the **Quick Link**.
6. Pass supply wire through the **Loop** and **Quick Link**, then wind onto the **Chain** and thread from the center of the **Cross Bar**.
7. The power supply wire consists of three wires, one smooth, one ribbed and one gold ground wire.
8. Connect the wires as shown :
  - A. Connect the House Ground Wire to the Fixture Ground Wire.
  - B. Connect the House White or Ribbed Wire to the Fixture Supply Wire (White or Ribbed Side).
  - C. Connect the House Black/Red Wire to the Fixture Supply Wire (Black or Smooth Side).
  - D. Wrap each connected wire with Wire Connector and carefully stuff all of the connected wires into the Outlet Box.
9. Install correct **Bulb** referring to fixture markings and/or labels for maximum wattage. (Not included)

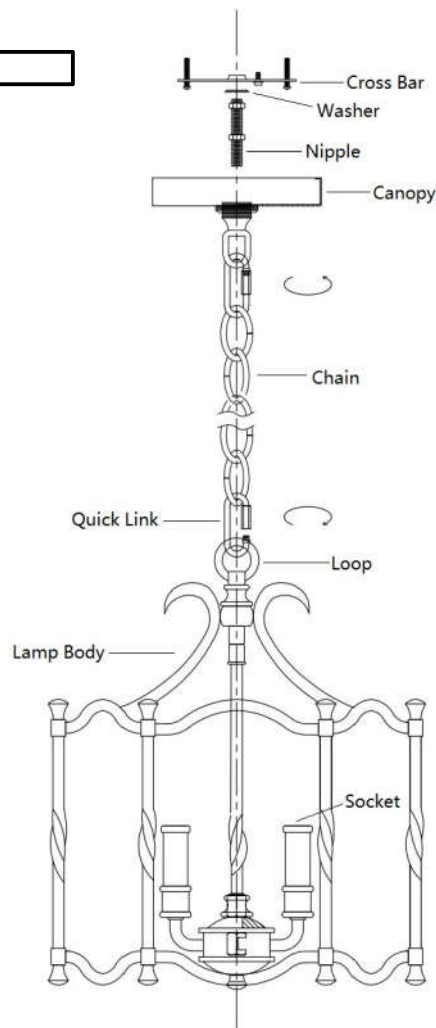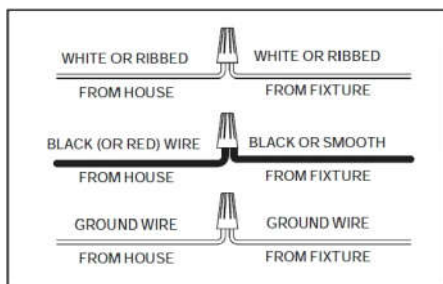

22112

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

[www.uttermost.com](http://www.uttermost.com)