
 






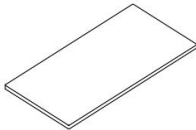

 



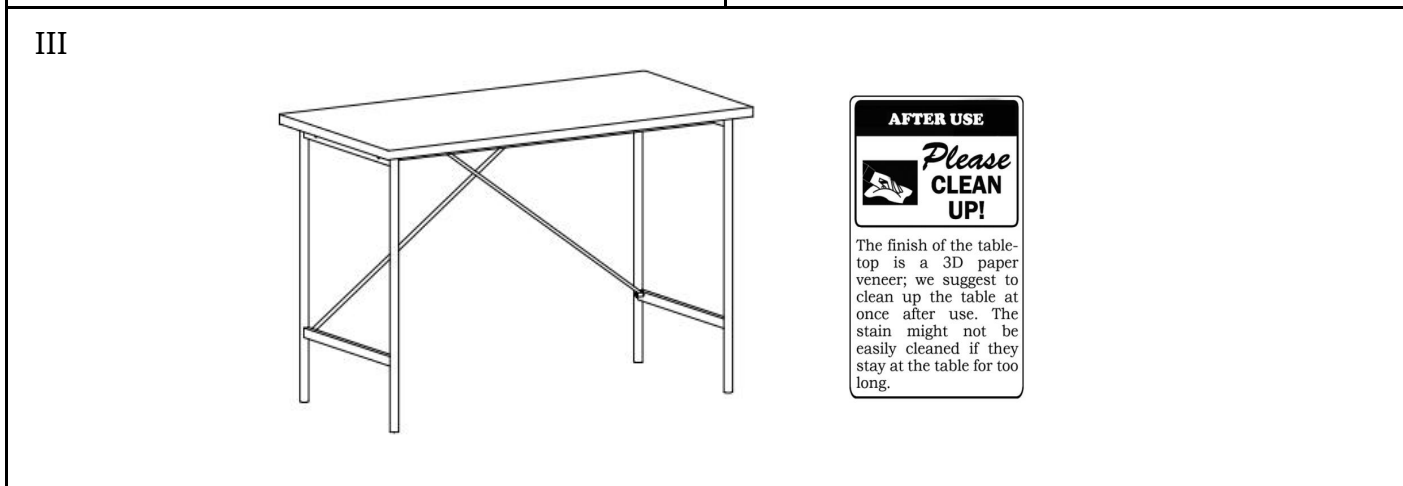
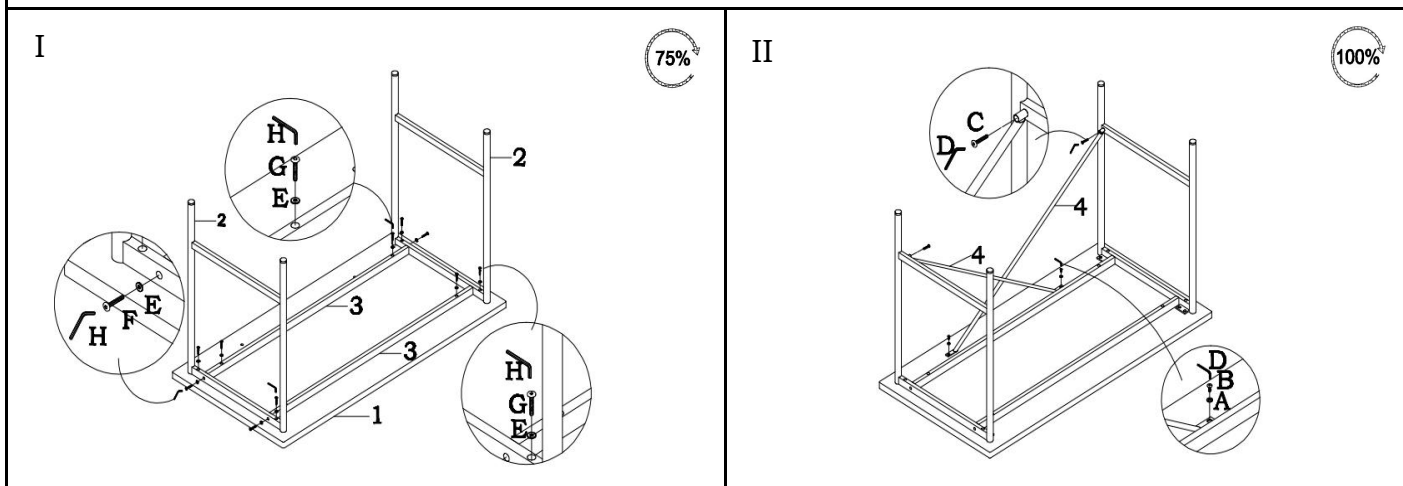
ITEM NAME/NOM D'ITEM: BURST DESK/TOURS DESK

ITEM #/NO. ITEM: 101877/101878

## PARTS LIST/LISTE DES PIÈCES

(1)	(2)	(3)	(4)	(5)
				A.  $\phi$ 6mm x 2 B.  M6x18mm x 2 C.  M6x35mm x 2 D.  4mm x 1 E.  $\phi$ 8mm x 12 F.  M8x35mm x 4 G.  M8x45mm x 8 H.  5mm x 1
x1	x2	x2	x2	

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE



For missing parts or damaged parts, please call /  
 Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico: (866)-798-6663