IN11325AGY INSTALLATION INSTRUCTIONS

1500 Cherokee Parkway, Suite 100, Acworth, GA 30102 Phone: (866) 845-5451 • Fax: (866) 816-6165

service@acclaim-lighting.com • www.acclaim-lighting.com



Please read carefully and save these instructions as you may need them a later date.

CAUTION

Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

GENERAL

All electrical connections must be in accordance with local and National Electrical Code (N.E.C) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustration.

ASSEMBLY AND INSTALLATION

- 1. Use two quick links to connect the hooks and hung rods.
- 2. Attach the cross bar, Secure nipple, washer, hex nut and top loop to the outlet box using the 2 mounting screws.
- 3. Use two quick links at both ends of chain to link the fixture loop and chain, then the chain and the top loop.
- 4. Lower the canopy and reinforcing cover onto the top nut and pass the top loop through canopy and reinforcing cover.
- 5. Make wire connections:
 - ---The ridged wire (unmarked) from the fixture to white wire from power source.
 - ---The smooth wire (marked) from the fixture to black wire from power source.
 - ---Attach the ground wire to cross bar with a green screw.
- 6. Place the canopy over the outlet box and secure the canopy with top nut.
- 7. Install bulbs: (Bulbs not included). (Don't exceed the maximum capacity that recommended on the sockets).

BLACK WIRE WHITE WIRE WIRE CONNECTOR-WIRE CONNECTOR GROUND WIRE CROSS BAR MOUNTING SCREW GROUND SCREW WASHER HEX NUT NIPPLE -CANOPY TOP LOOP TOP NUT QUICK LINK WIRE -CHAIN QUICK LINK 100P QUICK LINK HUNG ROD QUICK LINK SOCKET

INSTALLATION IS NOW COMPLETED.