


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-3002TB

CAREFULLY PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP PER THE SKETCH BELOW.

1. SCREW SOCKET PART (B) TO LIGHTING BODY (A).
2. INSERT HARP (C) ONTO SADDLE OF THE SOCKET PART (B).
3. PUT SHADE (D) ONTO HARP (C) AND TIGHTEN WITH FINIAL (E).
4. ATTACH THE FELT PAD (F) TO THE BOTTOM OF THE LIGHTING BODY (A).
5. INSTALL RECOMMENDED BULB (NOT INCLUDED IN THIS PACKAGE).

INSERT THE PLUG INTO AN OUTLET AND ENJOY YOUR LAMP!!

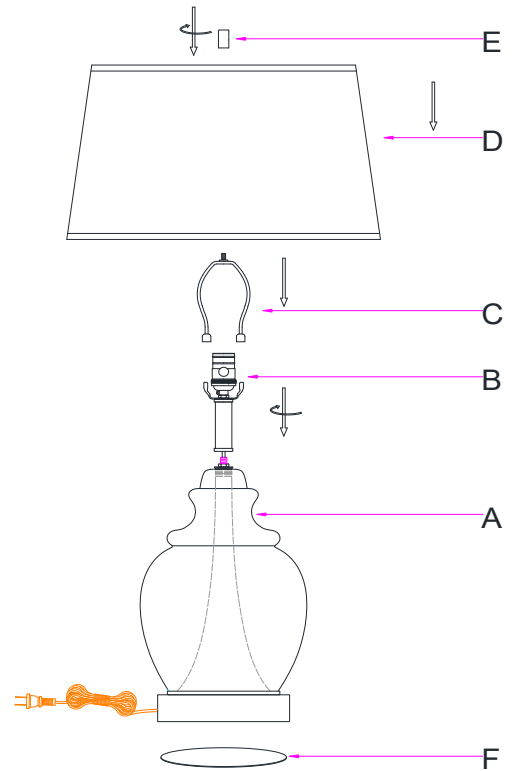

**Use Max 150W 3-WAY type
A bulb (bulbs not included)**

** TO REDUCE THE RISK OF ELECTRIC SHOCK, ALWAYS UNPLUG FROM THE ELECTRICAL OUTLET BEFORE INSTALLATION.*

** THIS FIXTURE IS SUITABLE FOR DRY LOCATION ONLY.*

** THIS FIXTURE SHOULD ONLY BE CLEANED WITH A SOFT LINT FREE CLOTH DAMPLED WITH WATER. DO NOT USE ANY CHEMICAL OR ABUSIVE CLEANER AS THEY MAY DAMAGE THE SURFACE OF THE PRODUCTS.*

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.