

ASSEMBLY INSTRUCTIONS

ITEM NO: BO-3124TB

CAREFULLY PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP PER THE SKETCH BELOW.


1. INSERT HARP (C) ONTO SADDLE OF SOCKET PART (D) OF THE MAIN FIXTURE.

1

2. PUT SHADE (B) ONTO HARP (C) AND TIGHTEN WITH FINIAL (A).

3. INSTALL RECOMMENDED TYPE A LIGHT BULB ON THE TOP SOCKET (NOT INCLUDED IN THIS PACKAGE)..

4. INSERT THE PLUG (F) INTO AN OUTLET.

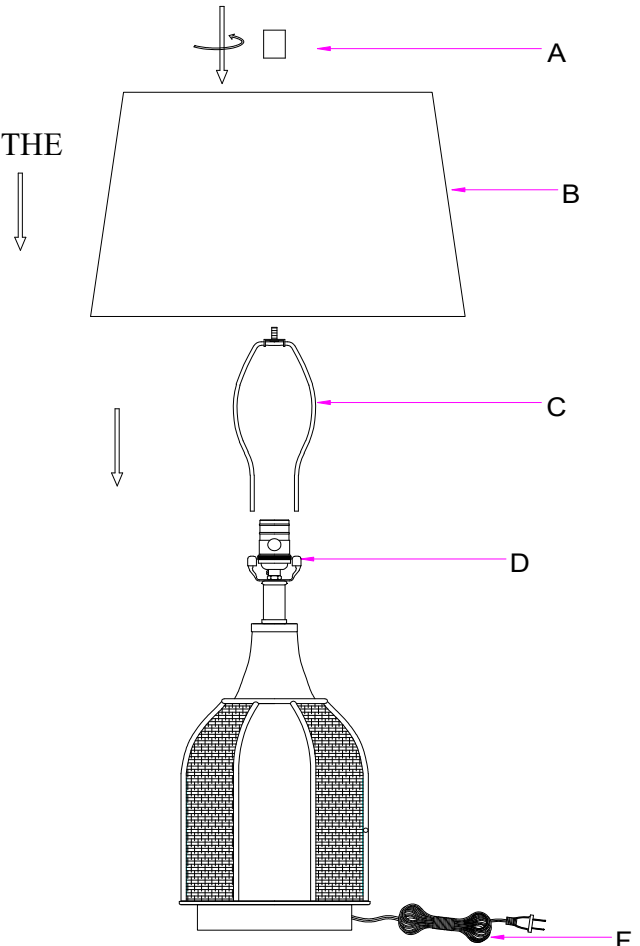

Use Max 100W type A bulb (bulbs not included) and 2W LED Bulb (bulb included)

ENJOY YOUR LAMP!!

** TO REDUCE THE RISK OF ELECTRIC SHOCK, ALWAYS UNPLUG FROM THE ELECTRICAL OUTLET BEFORE INSTALLATION.*

** THIS FIXTURE IS SUITABLE FOR DRY LOCATION ONLY.*

** THIS FIXTURE SHOULD ONLY BE CLEANED WITH A SOFT LINT FREE CLOTH DAMPLED WITH WATER. DO NOT USE ANY CHEMICAL OR ABUSIVE CLEANER AS THEY MAY DAMAGE THE SURFACE OF THE PRODUCTS.*

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.