
()RRF[[]]

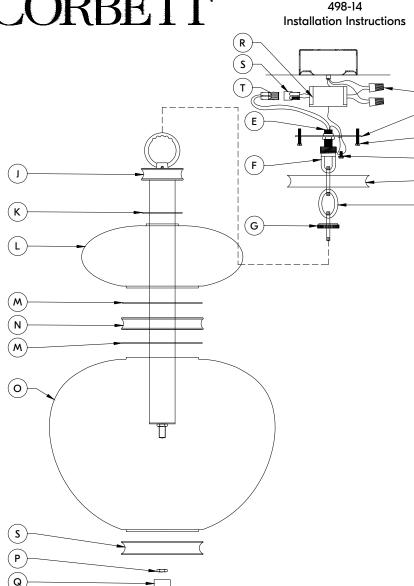

FIXTURE INSTALLATION

SYROS

D

А

в

C

н

1

- 1. Attach the Ground wire (Green) to the ground inside the outlet box (Generally green or bar copper wire) or the GROUND SCREW (C) on the MOUNTING PLATE (A). NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- Connect the white wire on the DRIVER (R) to the neutral (Generally white) wire in the outlet box. 2. Fasten the wires together with an approved fastener (WIRE NUT) (D). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
- 3. Connect the black wire on the DRIVER (R) to the hot (Generally black) wire in the junction box. Fasten the joined wires same as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
- 4. Attach the MOUNTING PLATE (A) onto the junction box using the MOUNTING SCREWS (B). This fixture is designed to be mounted on standard round or octagon junction box. The junction box must be securely mounted to the structure of the building.
- 5. Open the end link on the CHAIN (I) and attach to the loop on the FIXTURE ASSEMBLY (I) (WITH LED). Hang the FIXTURE ASSEMBLY (J) (WITH LED) on the CHAIN (I) at your desired height, and remove excess CHAIN (I).
- 6. Feed the wire through the CHAIN (I), SCREW COLLAR (G), CANOPY (H), SCREW COLLAR LOOP (F), NIPPLE (E), and MOUNTING PLATE (A), and screw the NIPPLE (E) onto the MOUNTING PLATE (A).
- 7. Open the top link on the CHAIN (I), and Hang the FIXTURE ASSEMBLY (J) (WITH LED) to the SCREW COLLAR LOOP (F).
- Insert the FEMALE (S) into the MALE (T). 8.
- Push the wires back into the CANOPY (H). Lift up the CANOPY (H) up to the ceiling, and secure with 9. the SCREW COLLAR (G).
- 10. Attach SILICONE WASHER A (K), GLASS A (L), SILICONE WASHER B (M), RING (N), GLASS B (O) up to the FIXTURE ASSEMBLY (J) (WITH LED), Lift up the CAP (U) and secure with the HEX NUT (P) and FINIAL (Q).
- 11. Restore power to the outlet at the breaker or fuse box.

PART(S)	REPLACEMENT PART NAME	NUMBER	PART(S)	REPLACEMENT PART NAME	NUMBER
A,B,C,D,E	HARDWARE KIT	HDW-04	Q	FINIAL	FIN-498-14
Н	CANOPY	CPY-498-14	R	DRIVER	DVR-498-14
Ι	CHAIN	CHN-498-14	U	CAP	CAP-498-14
L	GLASS A	GLS-498-14-A			
N	RING	RNG-498-14			
0	GLASS B	GLS-498-14-B			