


CORBETT

TOULOUSE 504-01 Installation Instructions

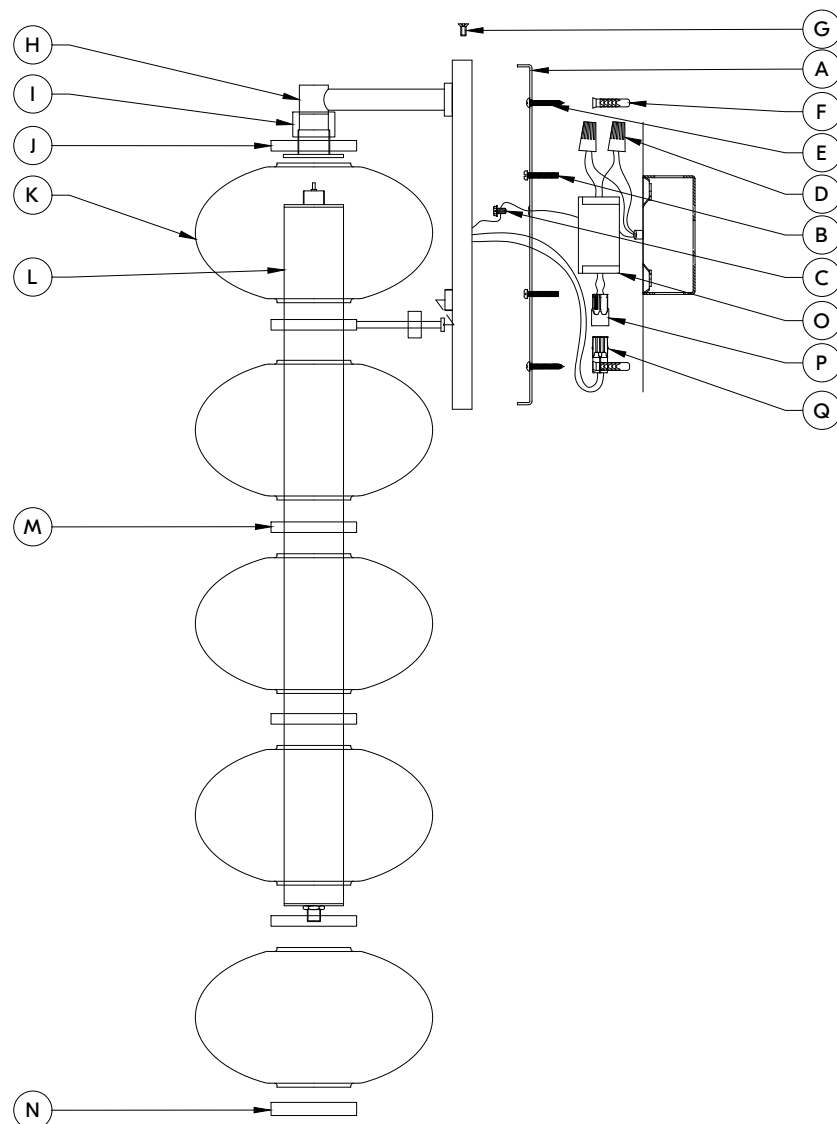

FIXTURE INSTALLATION

1. Determine the location for the lamp. Using the mounting plate as a template, mark the location of the holes for the WALL ANCHOR (F).
2. Drill the appropriate size holes for the WALL ANCHOR (F). (the holes should be slightly smaller than the size of the anchors.) Install the wall anchors to the hole.
3. Connect the white wire on the DRIVER (O) to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUTS) (D). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. **MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT.**
4. Connect the black wire on the DRIVER (O) to the hot (Generally black) wire in the junction box. Fasten the joined wires same as previous step. **NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!** Put the DRIVER (G) into the junction box.
5. Attach the Ground wire (Green) to the ground inside the outlet box (Generally green or bar copper wire) or the GROUND SCREW (C) on the MOUNTING PLATE (A). **NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH.**
6. Roll up any remaining wire and DRIVER (O) inside the junction box and Push the Fixture Lead wires back into the junction box, Attach the MOUNTING PLATE (A) onto the junction box using the MOUNTING SCREWS (B). This fixture is designed to be mounted on standard junction box. The junction box must be securely mounted to the structure of the building. Screw in the WOOD SCREW (E) to the WALL ANCHOR (F).
7. Insert the FEMALE (P) into the MALE (Q).
8. Attach the FIXTURE ASSEMBLY (H) to the MOUNTING PLATE (A) and secure with the FIXTURE MOUNTING SCREWS (G).
9. Screw the LED (L) up to FIXTURE ASSEMBLY (H) of the fixture.
10. Attach the GLASS (K) with RINGS (M) to the FIXTURE ASSEMBLY (H) and secure with the CAP (I), RING (I) and FINIAL (N).
11. Restore power to the outlet at the breaker or fuse box.

PART(S)	REPLACEMENT PART NAME	NUMBER
A,B,C,D,E,F	HARDWARE KIT	HDW-504-01
G	FIXTURE MOUNTING SCREW	SCR-M
K	GLASS	GLS-504-01
M	RING	RNG-504-01
N	BOTTOM CAP	CAP-504-01
O	DRIVER	DVR-504-01