

CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com

ASSEMBLY INSTRUCTION MODEL # ADD-327-CH-WH


Refer to the safety cable mounting on the next page



All electrical components must be installed by a licensed electrician in accordance with the National Electric Code and the appropriate local electrical codes.



You will need 28 Candelabra Base Bulb
40 Watts Recommended 60 Watts Max.
USE LED BULBS FOR EXTENDED USE
This fixture is Dry rated

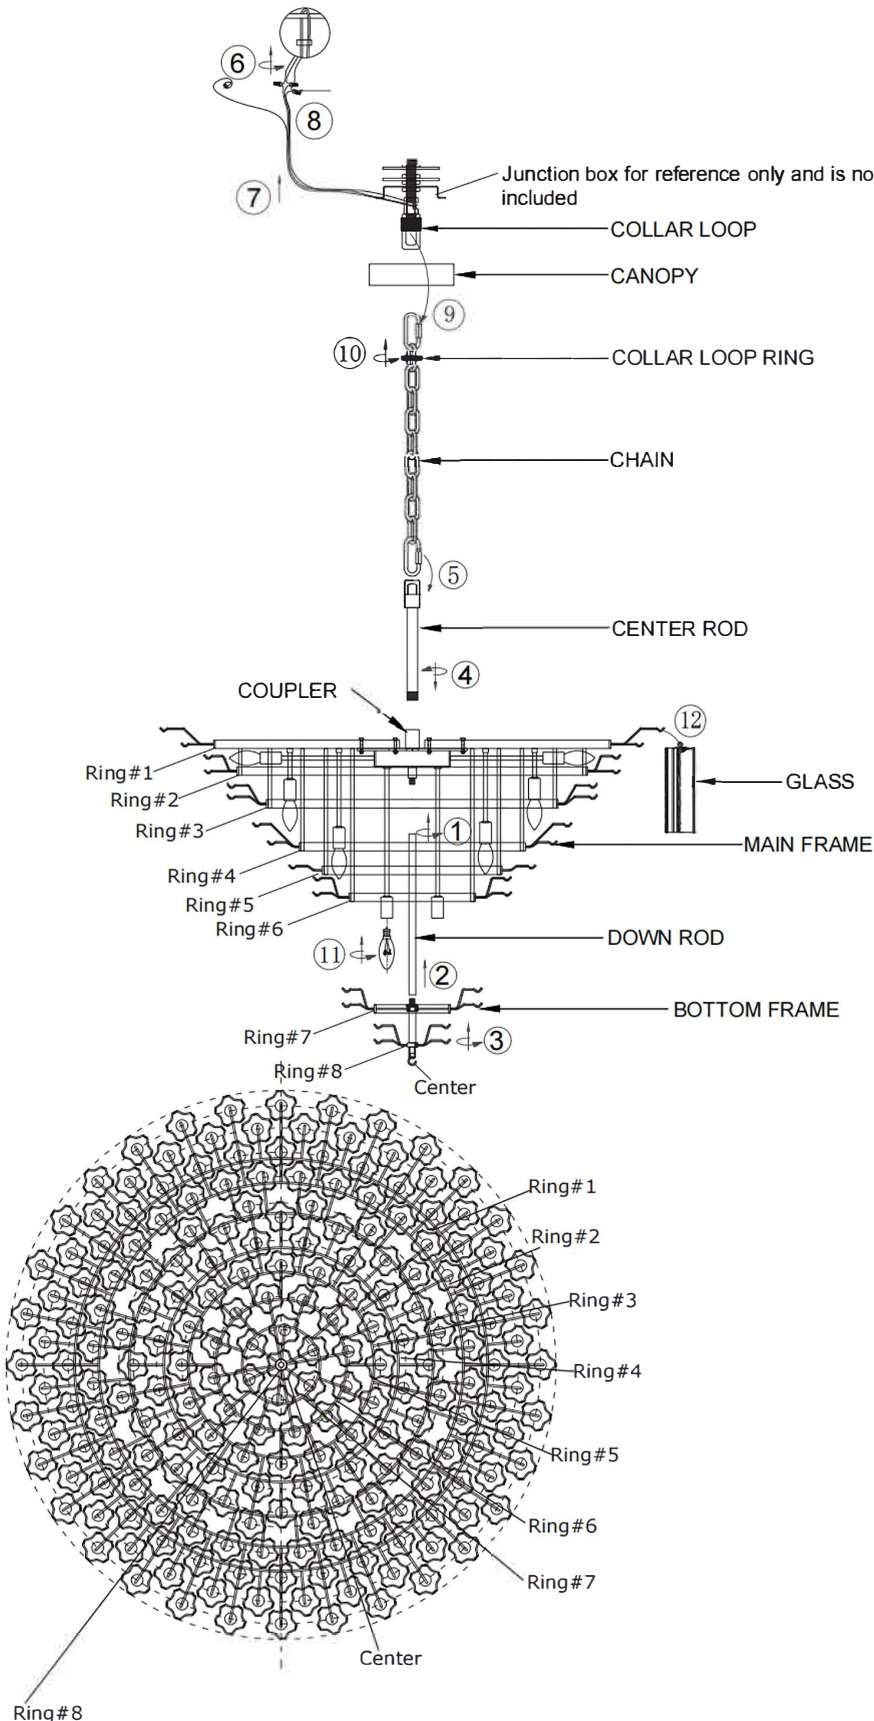

How to install


1. Decide the preferred hanging height and choose the correct length of chain needed.
2. Screw the down rod onto the coupler on the bottom of distribution box. Then screw the bottom frame onto the down rod.
3. Feed the fixture wire through the center rod and screw the center rod onto the coupler on top of the frame.
4. Refer to the safety cable mounting on the next page to complete the assembly of the mounting hardware and fixture.
8. Install the bulbs into socket.
9. Dress the glass starting from the bottom of frame.

Glass Sets

1.211pcs White glass W2 3/4 x H7 3/4"

WARNING: This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov

SAFETY CABLE INSTALLATION INSTRUCTIONS

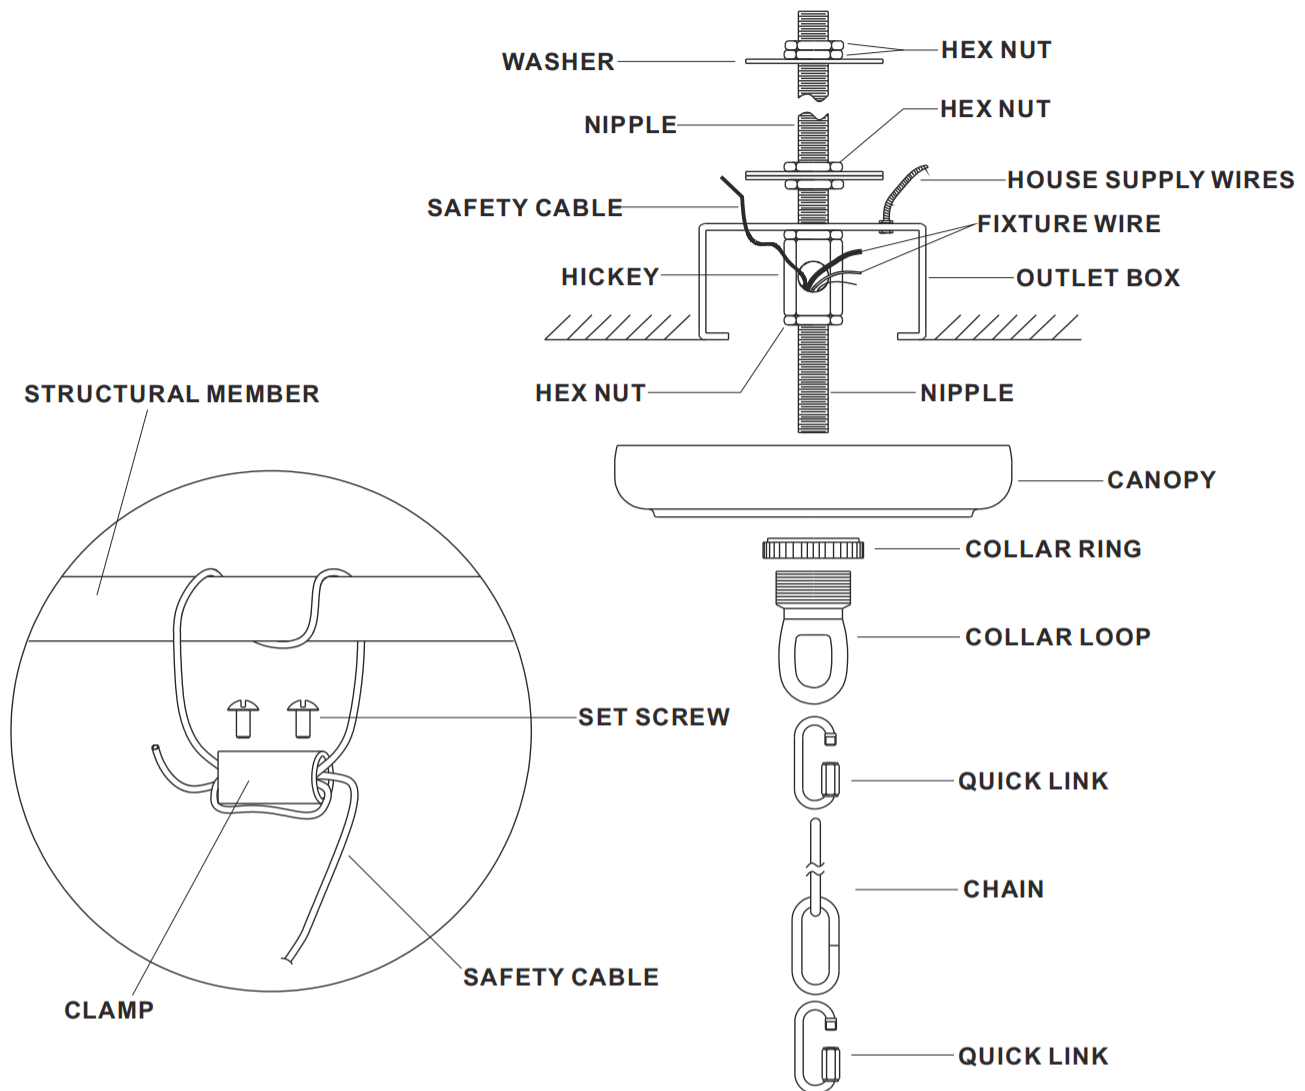

IMPORTANT:

FOR A SAFE AND SECURE INSTALLATION, THESE FIXTURES MUST BE INSTALLED BY MEANS OF SUPPORTS THAT ARE INDEPENDENT OF THE OUTLET BOX.

SUGGESTED INSTALLATION:

1. Provide a 1/2 IPS pipe with one end securely mounted to a beam or a structural member. The other end should protrude through the center of the outlet, as shown.
2. Assemble the screw collar loop, nipple, hex nuts and hickey to center 1/4 IPS support pipe and adjust overall length to allow the collar ring to hold the canopy flush to the ceiling. When the adjustments have been completed secure the hex nut, as shown.
3. Use one quick link to connect fixture loop and the bottom of chain. Slide the screw collar ring over the upper end of the chain, through the (Finished side down). Then use another quick link to connect collar loop and the top of chain.
4. Lace the fixture wires, ground wires and safety cable through the chain and screw collar loop, exiting through the side of HICKEY. Proceed to attach the FIXTURE GROUND WIRE to HOUSE GROUND WIRE using wire connector. Using wire connectors, connect the HOUSE WHITE WIRE to the FIXTURE SUPPLY WIRE (WHITE OR RIBBED SIDE); connect the HOUSE BLACK (or RED) WIRE to the FIXTURE SUPPLY WIRE (BLACK or SMOOTH SIDE). Wrap all connectors with approved electrical tape. Wrap safety cable around outlet box brace and pull cable taut. Secure cable with the clamp and (2) set screws provided, as shown.
5. Push the CANOPY upward over the OUTLET BOX. Be sure that all wires are carefully tucked into the OUTLET BOX cavity. Secure canopy against ceiling by threading CANOPY LOCK RING onto the CANOPY LOOP. Tighten until snug.



CRYSTORAMA

LIGHTING THE WAY FOR SIXTY YEARS



Crystorama.com

ASSEMBLY INSTRUCTION MODEL# ADD-327-CH-WH

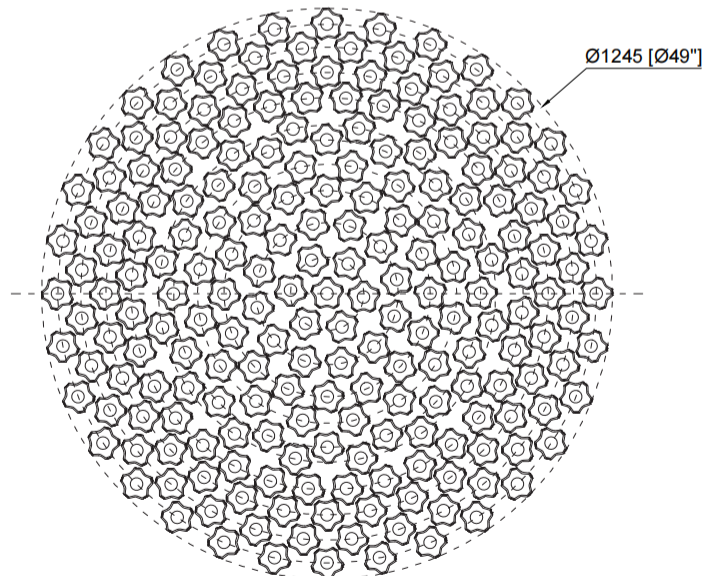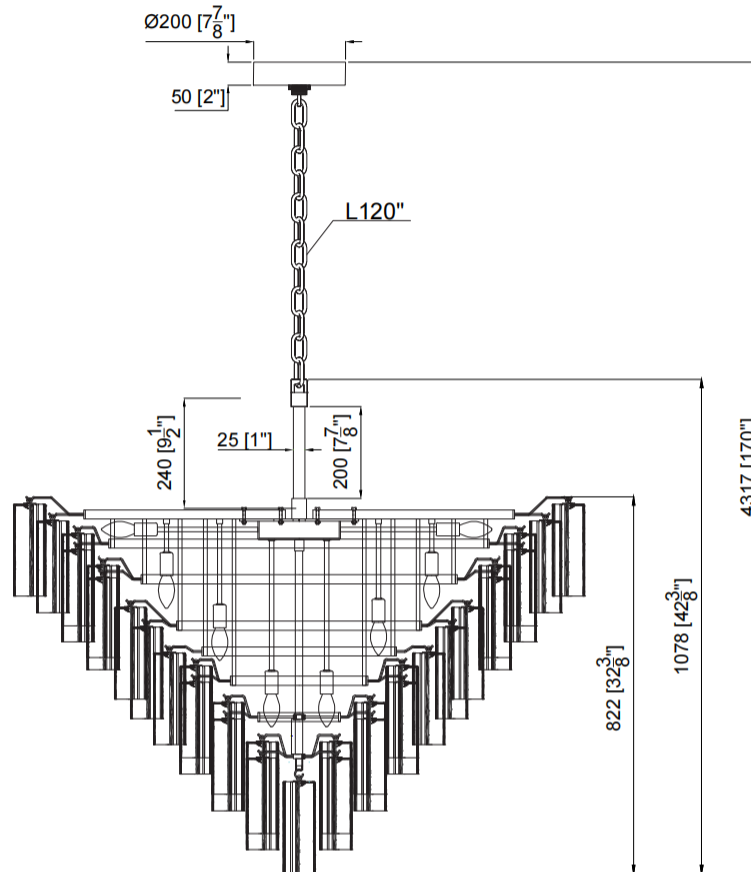

 **WARNING:** This product can expose you to Lead which is known to the state of California to cause cancer and/or birth defects or reproductive harm. For more information go to www.P65Warnings.ca.gov



ASSEMBLY INSTRUCTION MODEL# ADD-327-CH-WH

Part Number

Part Numbers

A. Mounting hardware includes

For 50lbs rated outlet box
(1)-Long threaded nipple
(1)-Short thread nipple
(3)-Metal washer
(7)-Hex nut
(1)- Hickey

- B. (1)-Collar loop
- C. (1)-Canopy,D7 7/8"H2"
(XBN327CHCAN8IN)
- D. (2)-Quick link
- E. (1)-Collar loop ring
- F. (1)-Chain,D5/16*L120"
(XBN327CHCHA8MM)
- G. (1)-Fixture loop
- H. (1)-Center rod,D1 1/4*L9 1/2"
(XBN327CHROD9.5IN)
- I. (1)-Main frame
- J. (211)-White glass,D2 3/4xL7 3/4"
(XBN300CHWHGLA7.75IN)
- K. (1)-Down rod,D5/8*L9 1/4"
- L. (1)-Bottom frame

