


assembly instructions

Family: Shaker | Item No. 4234 VZ

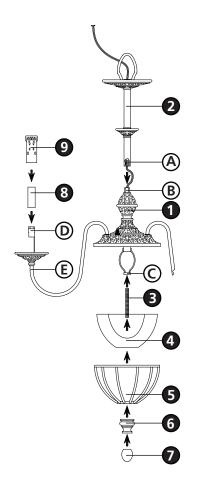

Drawing 1 - Fixture Assembly



Ystart here

- 1. Find a clear area in which you can work.
 - 2. Unpack fixture and glass from carton.
 - 3. Carefully review instructions prior to assembly.

*** The construction of this fixture will be accomplished by first assembling the main body of the fixture, making all necessary electrical connections, hanging the fixture from the ceiling, and then installing the glass.

SAFETY WARNING: READ WIRING AND GROUNDING INSTRUCTIONS (I.S. 18) AND ANY ADDITIONAL DIRECTIONS. TURN POWER SUPPLY OFF DURING INSTALLATION. IF NEW WIRING IS REQUIRED, CONSULT A QUALIFIED **ELECTRICIAN OR LOCAL AUTHORITIES FOR CODE REQUIREMENTS.**

- 1. To assemble main body, slip center column (2) along wire and thread onto coupler (A).
 - 2. Spread arms (E) so that they are equally spaced 90 degrees apart.
 - 3. Please refer to hanging instruction sheet (I.S. 19) provided to hang this fixture. Then refer back to this sheet to continue installation of this fixture.
- 1. Prior to installing glass, bottom socket can be lamped accordingly.
- 2. To install glass, thread nipple (3) in harp (C) approximately 1/4" see Drawing 1.
- 3. Place glass (4) into cage (5) and line up center holes.
- 4. Slip glass (4) and cage (5) onto nipple (3).
- 5. While holding glass (4) and cage (5) in place, slip decorative break (6) onto nipple (3).
- 6. Thread on bottom finial (7) onto end of nipple (3) and tighten.
- 7. Slip plastic candle sleeve (8) over socket (D), followed by glass candle sleeve (9).
- 8. Candles can now be lamped accordingly.

Note: Maximum wattage for 4234 fixture is 7 watts per bulb and 60 watts per bulb. 2.7.08