


INSTALLATION INSTRUCTIONS FOR FIXTURE #4104-xxx

WARNING! SHUT POWER OFF AT FUSE OR CIRCUIT BREAKER.
AVERTISSEMENT! COUPER LE COURANT AU NIVEAU DES FUSIBLES OU DU DISJONCTEUR.

ASSEMBLING THE FIXTURE (FIG. 1)

1. Shut off the power at the fuse box or circuit breaker. If necessary, remove the old fixture from the ceiling including the mounting hardware.
2. Carefully remove the new fixture from the carton and check that all parts are included as shown in the illustration.
3. Adjust the arms to the desired position.
4. Thread the nipple (B) into the coupling (C) until snug;
5. Install the fabric shade (K) onto the bracket (D) using ball screws (P);
6. Thread the nipple (F) into the coupling (E) and secure with the hex nut.
7. Install (3) three medium base bulb up to 100 watts each or CFL or LED equivalent (not included) in accordance with the fixture specification.—**DO NOT EXCEED THE MAXIMUM WATTAGE RATING! (NE PAS DEPASSER LA PUISSANCE NOMINALE MAXIMALE!)**
8. Place the tube (G), check cover (H), flat washer (I), rubber washer (J), glass diffuser (L), rubber washer (J) and flat washer (I) over the nipple (F) in this order and secure with hex nut (O).
9. Place the cap (M) onto the nipple (F) and secure with finial (N).


Fig. 1

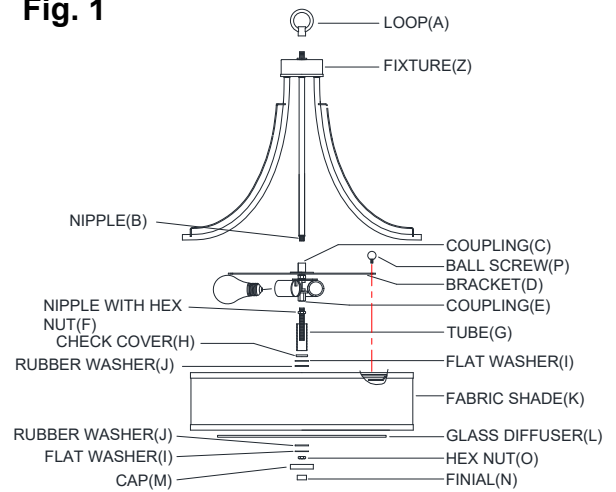

MOUNTING THE FIXTURE (FIG. 2)

1. Thread the fixture loop (A) onto the top nipple of fixture (Z) until snug.
2. Determine the desired hanging height to remove the excess chain link from chain (X). Attach the quick link(AA) to one end link of chain (X) and attach the quick link(AA) to the fixture loop (A). Note: The quick link(AA) must be fully closed.
3. Thread the fixture wire and bare copper ground wire up through every other link in the chain (X).
4. Install crossbar (P) with nipple (S), lock nut (R) and collar loop (T) to the outlet box (V) using two outlet box screws (W). The side of crossbar (P) marked "GND" must face out. The length of nipple (S) into crossbar (P) maybe adjusted if necessary. Then tighten with lock nuts (R) provided.
5. Slip collar ring (Y), follow up by canopy (U) and allow them to rest on fixture loop (A). Attach another quick link(AA) to another end of chain (X). Fasten the end link of quick link(AA) to the collar loop (T). Note: The quick link (AA) must be fully closed. Insert the fixture wires to up through the nipple (S).

Fig. 2

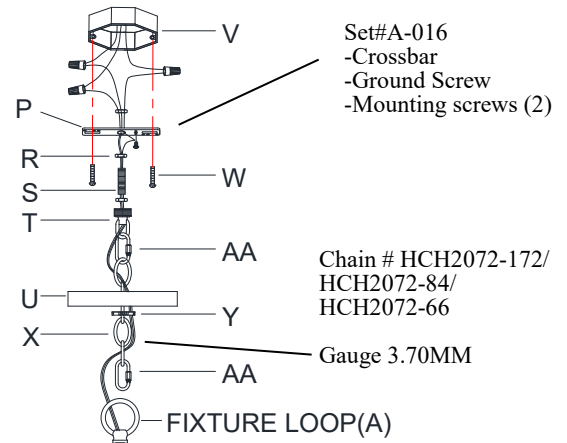

CONNECTING THE WIRE (See fig.3)

1. At this point, connect the electrical wires as shown in Fig. 3, making sure that all wire connectors are secured. If your outlet box has a ground wire (green or bare copper), connect the fixture's ground wire to it. Otherwise, connect the fixture's ground wire directly to the cross bar using the green screw provided.
2. Tuck the wire connectors neatly into the ceiling outlet box and raise the canopy (U) and collar ring (Y). Then thread collar ring (Y) onto collar loop (T) protruding through canopy.

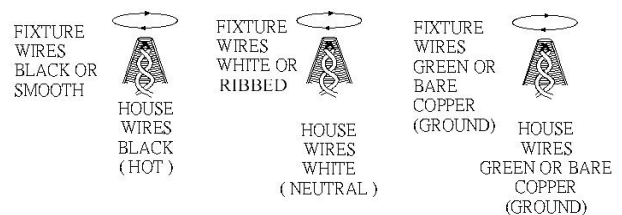


Fig.3

Your installation is now complete. Return power to the junction box and test the fixture.



Notice: It is important to use proper chain pliers (not included) to OPEN and CLOSE the chain included with this fixture. Do not open them with other tools that may twist or stress the chain links. It is important to use proper chain pliers like the ones shown in the diagram.

