


This product supports dimming

Caution- The max wattage for this fan is 300w. Lamps exceeding this wattage could damage the control and receiver.

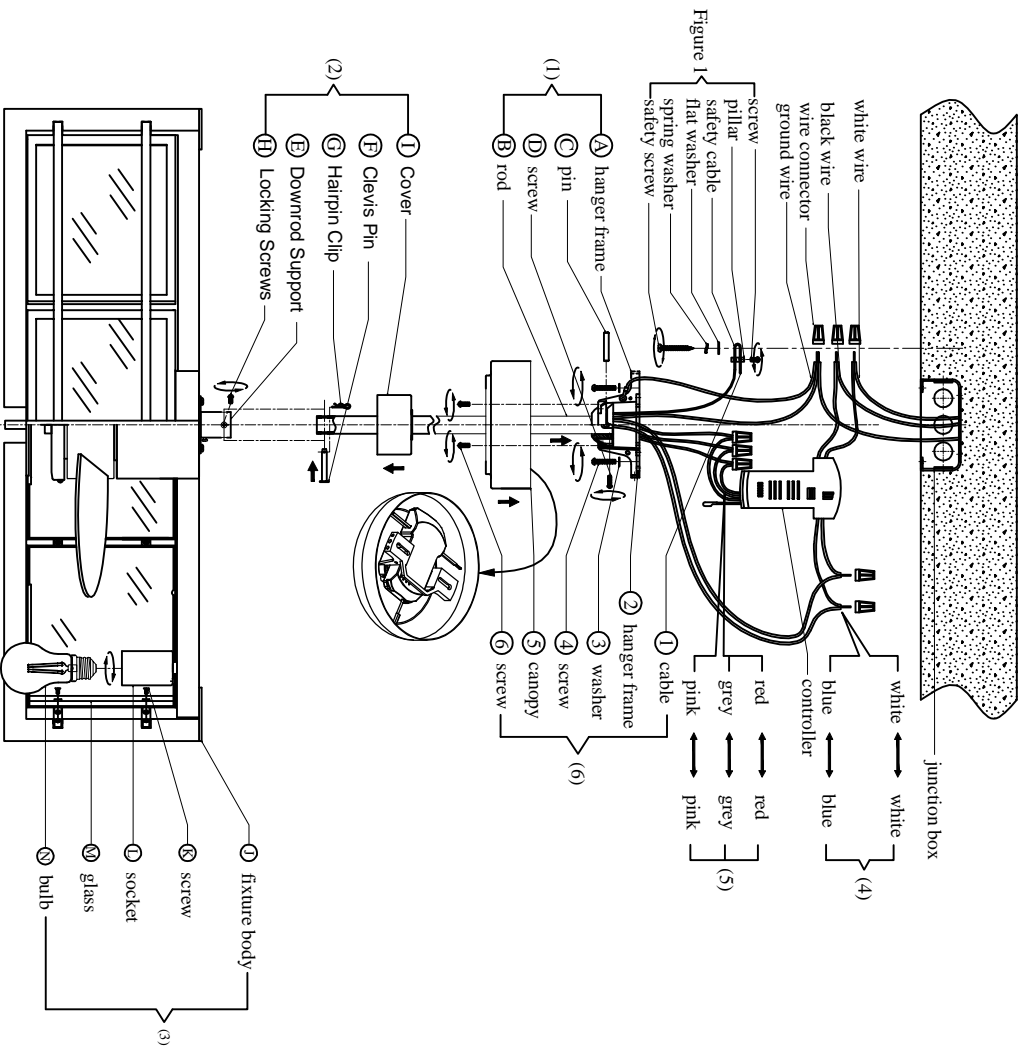

CEILING FAN LIGHT READ AND SAVE THESE INSTRUCTIONS

2025.12.25

CAUTION:

1. Be certain that no bare wire strands are exposed outside of the wire connectors
2. **Disconnect power at main circuit breaker to prevent possible injury from electrical shock.**
3. **To reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked (a) and use mounting screws provided with the outlet box.**
4. **Warning - to reduce the risk of electric shock, this fan without ability use isolating wall control switch**
5. **Warning - to reduce the risk of fire, electric shock, or personal injury, mount to outlet box marked (a) acceptable for fan support of 22.7 kg or less, and use mounting screws provided with the outlet box**

ASSEMBLY & INSTALLATION INSTRUCTIONS

Notice:

1. This product contains chemicals known to the state of California to cause cancer, birth defects and / or other reproductive harm. Thoroughly wash hands after installing, handling, cleaning, or otherwise touching this product.
2. Before using this product and doing maintenance, please read these instructions carefully and save them for future use.
3. This product is suitable for use with solid-state speed controls
4. The installation is to be in accordance with the national electrical code, ANSI / NFPA 70 and local codes.
5. After being wired, the ungrounded wire and grounded/grounding wire must be separated in two side of the outlet box
6. The splices, after being made, should be turned upward and pushed carefully up into the outlet box.
7. The remote controller is suitable for ceiling fan use.
8. This unit is packed completely for ceiling fan use.

Disconnect the power before installation.

Use and Installation:

1. Remove all fixture components and the parts bag from the carton.
1. Slip the rod (B) with three holes aligning through hanger frame (A), insert the pin (C) through the hole of the rod (B) and fall into the groove of the half ball tightened with screw (D).
2. Slide rod (B) into the downrod support (E) on top of the motor. Install the clevis pin (F) by aligning the holes in the downrod support (E) with holes in the rod (B). Secure clevis pin (F) with hairpin clip (G). Tighten the two set Screws (H) in the downrod support (E). slide cover (I) to cover downrod support (E).
3. Secure the glass (M) onto the fixture body (J), using the screw (K), screw the bulb (N) into socket (L).
4. Connect main power wire from junction box with the wires of the controller input, black with black, white with white and attach fixture ground wire and hanger frame ground wire and from outlet box ground wire with wire nut.
5. Connect the red, grey and pink wires from the output end of the controller to the red, grey and pink wires of the motor respectively.
6. An additional safety support is provided to prevent the fan from falling. Secure the safety cable to the ceiling joist with screw and washer, as illustrated in Figure 1. Thread the screw (4) through washer (3), screw the hanger frame into junction box firmly. Cover the junction box with canopy (5), fasten the hanger frame (2) with screws (6).