
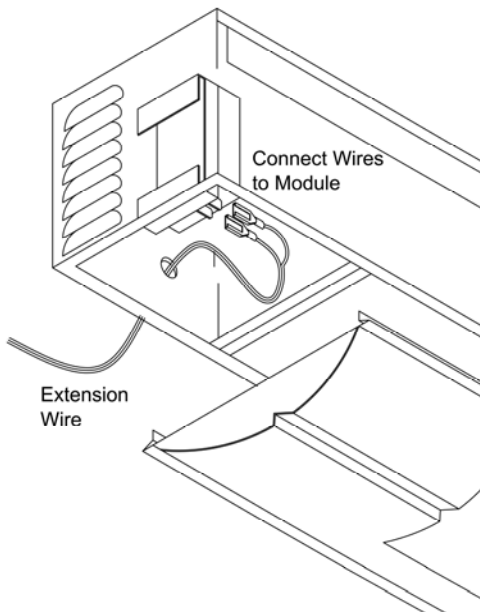


You must remove the Sunpak Face Trim to connect power to the heater. The Sunpak Face Trim is attached is four (4) screws located along each side of the heater.

SUNPAK S34-TSR Basic Wiring

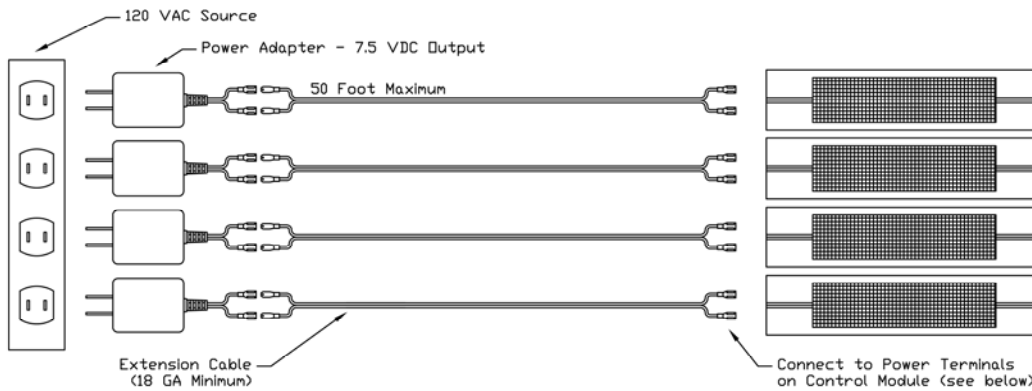

Basic Wiring

Sunpak S34-TSR requires 7.5 VDC for its controls. In most cases you will be running low voltage wire from Power Adapter plugged into 120 VAC outlets. The Power Adapter is **not** water proof and must be weather protected. The extension wire can be run 50 feet with 18 GA and suitable outdoor insulation. In order to add the extension wire you must:

1. Remove the Face Trim
2. Disconnect the Power Adapter from the control module.
3. Attached to slide connector to the extension wire.
4. Connect one end of the extension wire cable to the module and the other end to the Power Adapter

WARNING: Do no attach the Extension Cable directly to the 120 VAC Outlet.

NOTE: Male and Female connection are supplied in the extension kit supplied with each heater