

UTTERMOST ASSEMBLY INSTRUCTION


ITEM: 23493

PARTS LIST


NO	DRAWING	PARTS NAME	QTY	NO	PARTS NAME	DRAWING	QTY
A		FLAT WASHER 5/16" * 3/4"	8PCS	1	SEAT FRAME		1PC
B		LOCK WASHER 5/16"	8PCS	2	FRONT LEG		2PCS
C		BOLTS DIA 5/16" * 2"	8PCS	3	BACK LEG		2PCS
D		ALLEN WRENCH 5/16"	1PC	4	REMOVABLE BACK CUSHION		1PC

ASSEMBLY BOLTS MAY NEED TIGHTEND AFTER USE


STEP 1

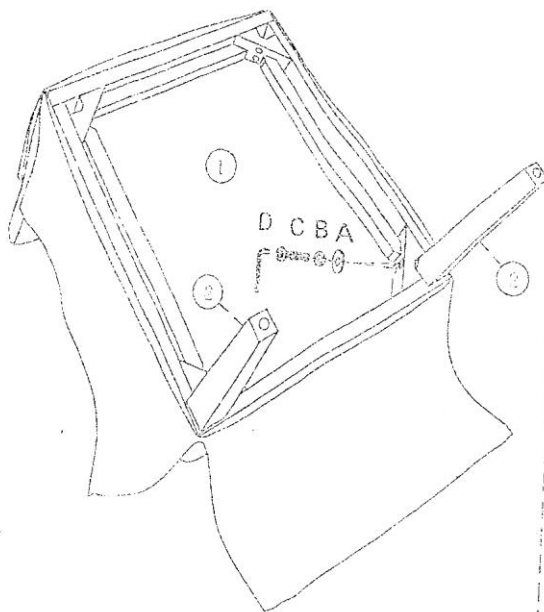


STEP 2

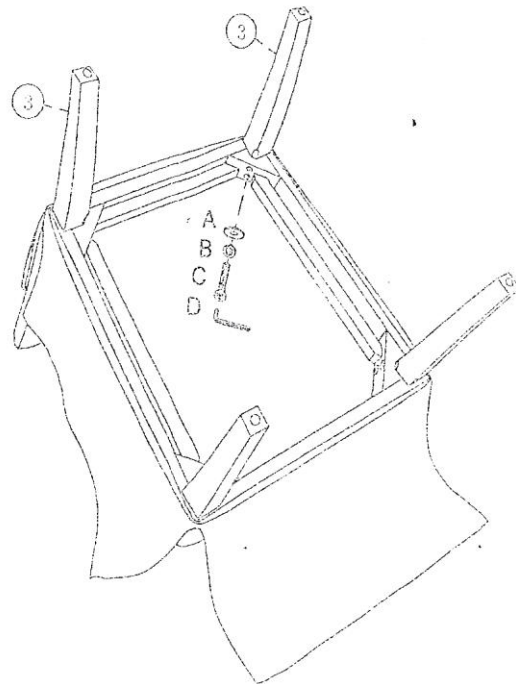

STEP 3

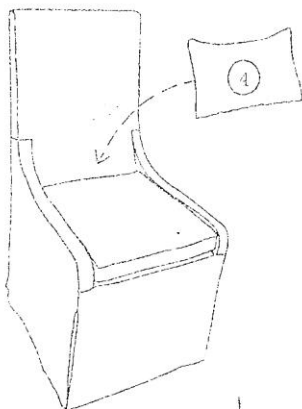

STEP 4

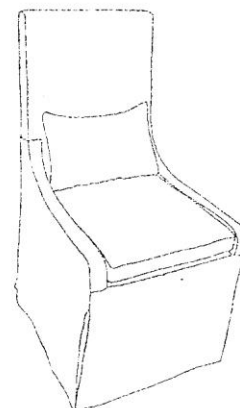

Slip Cover
comes
off

To avoid wobbly product, please follow below steps to assemble:
1) Attach the legs. Do not completely tighten the bolts that hold the legs.
2) Set the chair on the floor to level and then finish tightening the leg bolts.

PO BOX 558/3325 GRASSY HILL, MD