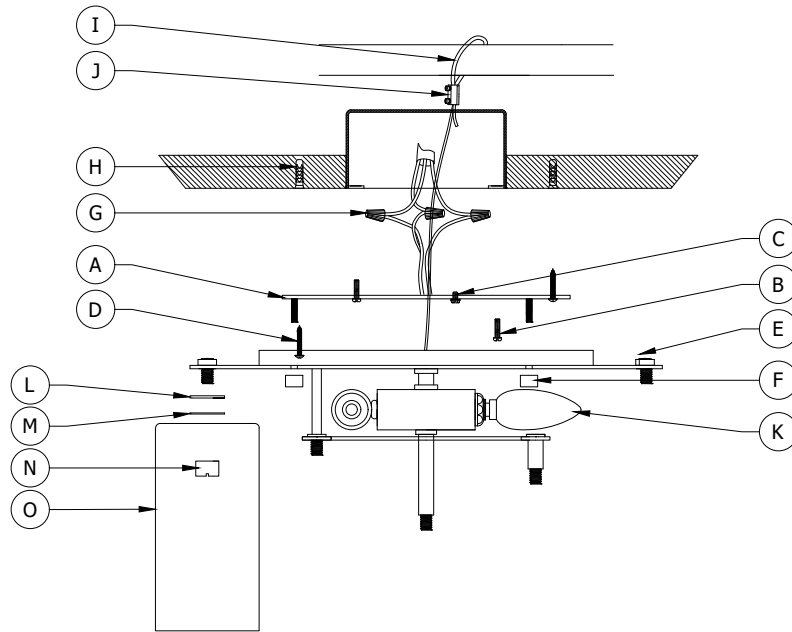
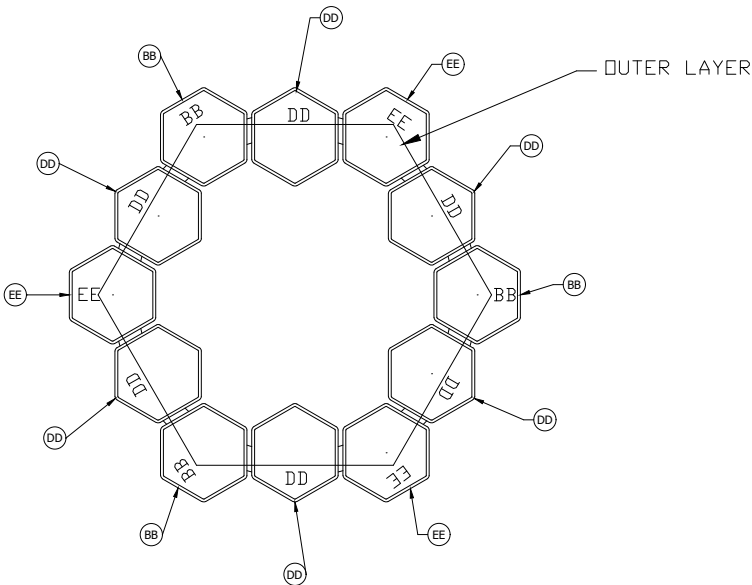
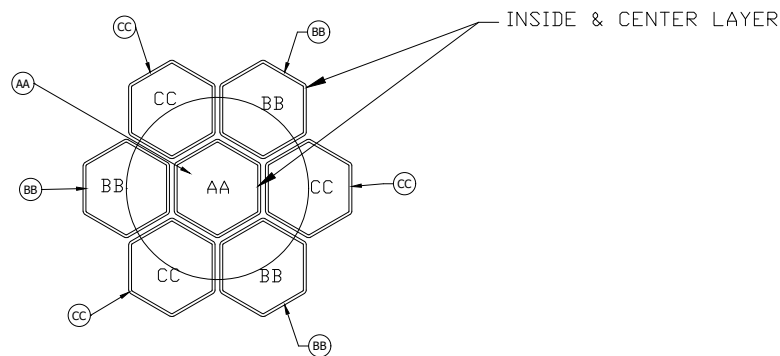


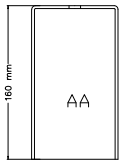
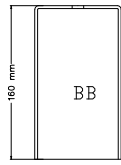
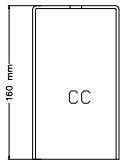
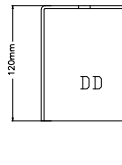
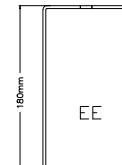


FIXTURE INSTALLATION

1. Mark the hole for the ANCHORS (H) using MOUNTING PLATE (A). Drill the marked hole then embed the ANCHORS (H) into the hole.
2. Attach the SAFETY CABLE (I) to the building structure or brace using CABLE CLIP (J).
3. Attach the MOUNTING PLATE (A) onto the junction box using the MOUNTING SCREWS (B) & ANCHOR SCREWS (D). This fixture is designed to be mounted on a heavy duty round or octagon junction box rated for a minimum of 90lbs. The junction box must be securely mounted to the structure of the building.
4. Trim off excess wires to a minimum 6" and strip each wires $\frac{5}{8}$ ".
5. Attach the Ground wire (Green) to the ground inside the outlet box (Generally green or bar copper wire) or the GROUND SCREW (C) on the MOUNTING PLATE (A). NEVER CONNECT GROUND WIRE TO "HOT" WIRE! FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
6. Connect the white fixture lead to the neutral (Generally white) wire in the outlet box. Fasten the wires together with an approved fastener (WIRE NUT) (G). Starting 1" below the fastener, tightly wrap the connection with electrical tape so that the connections seals the end of the fastener. MAKE SURE THERE ARE NO EXPOSED WIRE OF STRANDS THAT COULD CAUSE A DANGEROUS SHORT CIRCUIT!
7. Connect the black fixture leads to the hot (Generally black) wire in the junction box. Fasten the joined wires same as previous step. NEVER REVERSE HOT AND NEUTRAL WIRES. FAILURE TO FOLLOW THIS COULD RESULT IN SERIOUS INJURY OR DEATH!
8. Push the wires back into the junction box. Lift up the FIXTURE ASSEMBLY (E) to the MOUNTING PLATE (A) and secure using BARREL NUTS (F).
9. Screw the BULB (K) into the SOCKET of the fixture. THIS FIXTURE IS RATED FOR 10 WATT TYPE B LAMP. DO NOT EXCEED THE RECOMMENDED WATTAGE!
10. Insert the FLAT CAP (L), SILICON WASHER (M) & GLASS (O) onto the FIXTURE ASSEMBLY (E) then secure with GLASS HOLDER (N) using FLAT SCREWDRIVER. (SEE GLASS SCHEDULE).
11. Restore power to the outlet at the breaker or fuse box.

PART(S)	REPLACEMENT PART NAME	NUMBER
A,B,C,D,G,H	HARDWARE KIT	HDW-516-19
F	BARREL NUT	NUT-516-19
L,M,N	GLASS HOLDER ASSEMBLY	HAS-516-19



				
GLASS A 1PC	GLASS B 6PCS	GLASS C 3PCS	GLASS D 6PCS	GLASS E 3PCS

PART(S)	REPLACEMENT PART NAME	NUMBER
AA	GLASS-A	GLS-516-19-A
BB	GLASS-B	GLS-516-19-B
CC	GLASS-C	GLS-516-19-C
DD	GLASS-D	GLS-516-19-D
EE	GLASS-E	GLS-516-19-E

