

KKA Neoteric Lighting Design

10020PN




Assembly and Installation Instructions for Model's

Warning please make sure the electrical breaker is shut off before commencing with this installation

CAUTION - RISK OF FIRE

Installation of this fixture should be done by a licensed electrician or by a person familiar with local electrical codes and the construction and operation of this fixture.

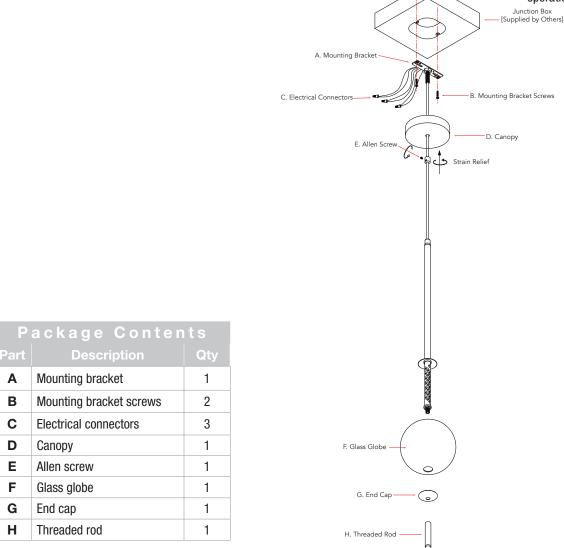

nstalling the fixture

Α

В

С

D

Е

F

G

н

please ensure the electrical breaker is in the Off position before commencing

Attach the Mounting bracket (A) to the Junction boxes [Supplied by others] using the Mounting bracket screws (B).

Connect the supply wires to the fixture wires using the supplied electrical wire connectors (C). White supply wire to the White fixture wire, Black supply 2 wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.

Secure the Canopy (D) to the ceiling using the Allen screw (E) and the Strain relief.

Attache the Glass globe (F) to the fixture using the End cap (G) and Threaded rod (H).

Switch on the electrical breaker switch and your new fixture is ready for many years of trouble free use.