

Neoteric Lighting Design



Assembly and **Installation Instructions** for Model's

Part

Α

С

Ε

F

G

Н

Ι

Allen screws


Allen wrench

30081FM

CAUTION - RISK OF FIRE Installation of this fixture should be done by a licensed electrical or by a person familiar with local electrical codes and the construction and operation of this fixture.

Warning please make sure the electrical breaker is shut off before commencing with this installation

Read and familiarize yourself with these instructions before commencing

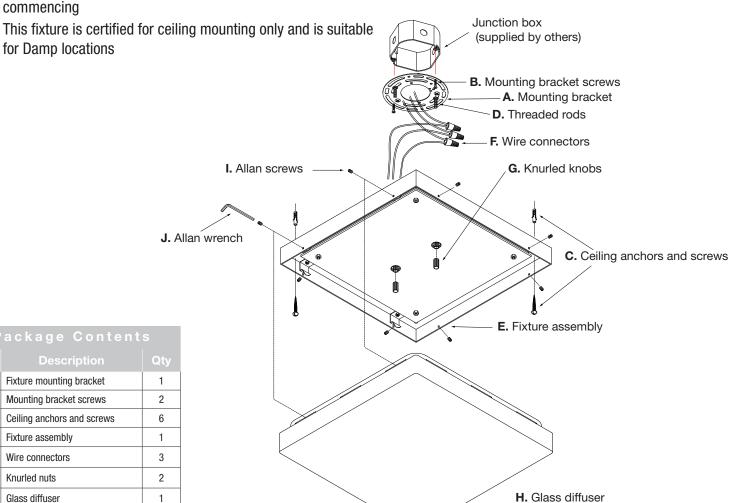

Installing the fixture please ensure the electrical breaker is switched off before commencing

- Loosely attach the Mounting bracket (A) to the Junction-Box with the two supplied Mounting bracket screws (B), mark the location for the Ceiling anchors (C) with a pencil, and remove the Mounting bracket. Drill and insert the Ceiling anchors and reattach the Mounting plate and secure in place with Mounting bracket and ceiling anchor screws.
- Connect the supply wires to the Fixture wires using the supplied electrical wire connectors (F). White supply wire to the White fixture wire, Black supply wire to Black fixture wire and the ground Bare Copper or Green wire to the Green fixture wire. Once the electrical wire connectors are securely fastened it is recommended to tape these connectors with electrical tape.
- Attach the Fixture assembly (E) to the Mounting bracket (A) by inserting the threaded bolts in the holes on the Fixture assembly and secure with supplied Knurled nuts (G).
- Align the Glass diffuser (H) Fixture assembly (E) and secure with supplied Allan screws (I) and Allan wrench (J).
- Switch on the electrical breaker and your new fixture is ready for many years of trouble free use

8

