


Assembly Instruction Sheet #S-1226P39 For Style 1226P39

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
Light Source: (10) 20 Watt Bulbs, 40W Maximum (Not Included)
Electrical Assembly Time: 15-30 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

⚠ Warnings and Cautions
 Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Hold one bulb as given sufficient time to cool before removal.

Package Contents

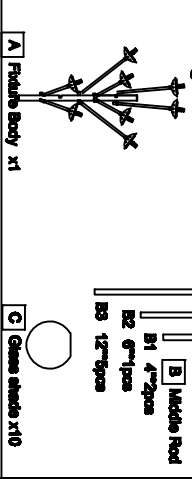

DESCRIPTION	QUANTITY
AA Cap nut	20
BB Wire nut	20
CC Outlet Box Screw	20
DD Mounting Screw	20
EE Mounting bracket	20
FF Hex Nut	20

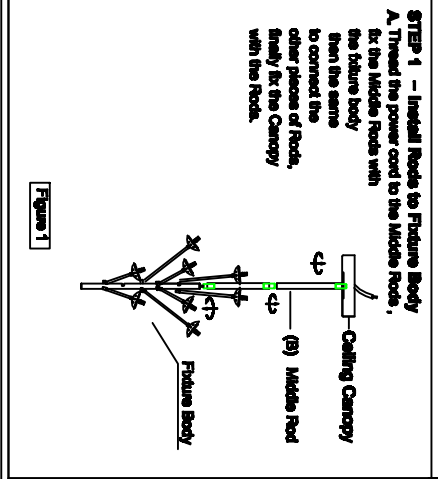


Figure 1

STEP 2 - Attach Mounting Screws, Lock Washers and Hex Nuts to Mounting bracket.

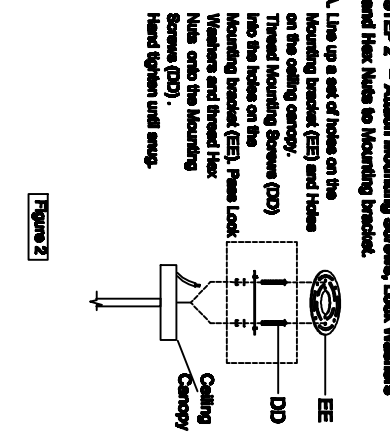


Figure 2

STEP 3 - Attach Mounting bracket to Outlet Box.

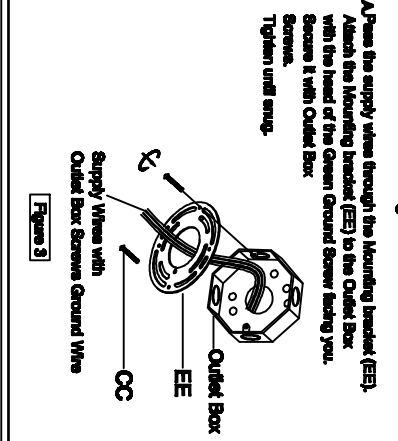


Figure 3

STEP 4 - Fit Ceiling Canopy to Mounting bracket Assembly.

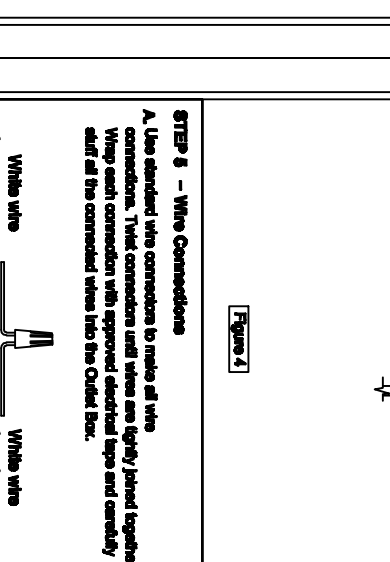


Figure 4

STEP 5 - Wire Connections

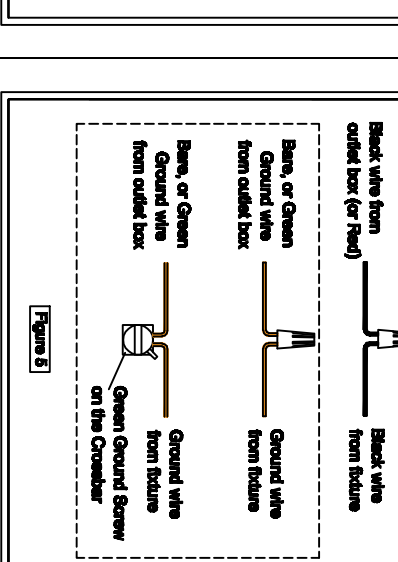


Figure 5

STEP 6 - Install Ceiling Canopy to Ceiling.

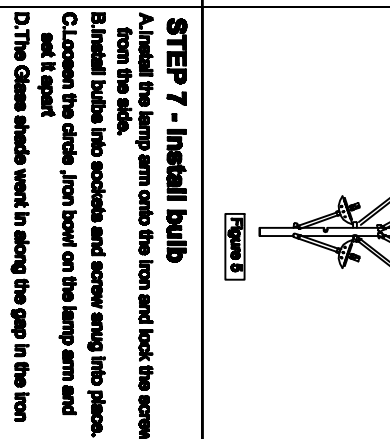


Figure 6

STEP 7 - Install bulb

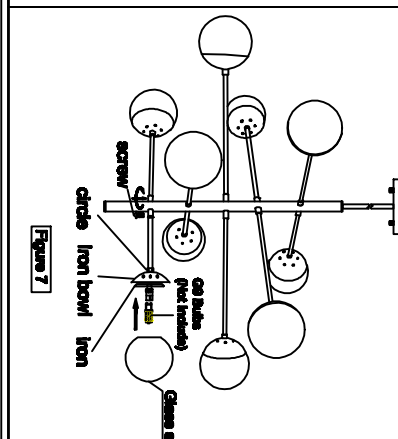


Figure 7