For Style 9853P21 Assembly Instruction Sheet #IS-9853P21


Required: Pathead ecrewitiver, Philips acrewitiver, pilers, who cutters, who stippers, electrical tops, safely glasses. Nauros: (4) E12 Cardelabra Base Bate 60W Machaum (Not Indude). Bed Assembly Time: 20-30 minutes select: Identify and hapod all parts before beginning installation. Check package content list and diagrams below to be sure all parts sent. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for

TRACULE LA LOLGO

⚠ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the ficture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool

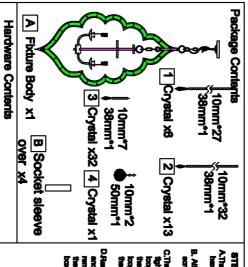

QUANTITY 혍 <u>3</u> ည်ငွ Nipple Hex Nut

PART

8 8 # ≥

Canopy Chain Loop

Canopy Lock Ring DESCRIPTION

Outlet Box Screw

₹

8

8

> A.Thread the nipple into the crossbar . Thread the lock washer and hax nut onto top end of the nipple. Do not fighten at this moment STEP 1 - Install the Canopy Chain Loop and Nipple

B. Attach the crossbar to the outlet box and escure with outlet box screws (not included). Hand tighten until enug.


C.Thread the carropy chain loop onto the end of the nipple and have tighten until anus. Place the ceiling carropy over the carropy chain loop against the ceiling to determine the correct position of thenipple. Thread the carropy lock ring cmb the carropy chain loop. Adjust the nipple to allow the ceiling carropy to rest against the ceiling when held in place by the carropy lock ring.

D.Ramove the canopy lock ring from the canopy chain loop and remove the ceiling carcipy. Unacraw outlet box ecrews to remove the croexion assembly. Tight the hox ruit above the croexion. And then reinstall the croexion assembly to the cutled box.

8≢

Nipple

Canopy Chain Loop

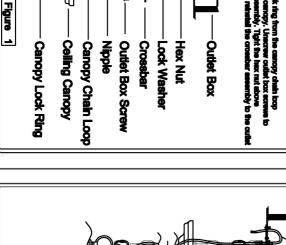

STEP 2 - Install the Fbdure Chain and Ceiling Canopy Adjust the fixture chain to your desired length by removing links.

A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are fightly joined together. Wrap each connection with approved electrical tape and carrefully stuff all the connected wires into the Outlet Box.

STEP 3 - Wire Connections

B. Pull the supply wires through the fluture chain alternating links.
After the wires are through the fluture chain, pull the supply wires and the ground wire through the canopy lock ring and the ceiling canopy in order.

C. Attach one end of the fluture chain to the fluture loop with one quick link. Lift the fluture and f biture chain up and attach the other end of the fluture chain onto the c anopy c hain I cop with another quick link. The fluture will now hang safely.

Black wire from outlet box (or Red)

White wire from outlet box

White wire from fluture


Black wire

from fixture

D. Feed the supply wires and ground wire through the campy chain loop and nipple into the outlet box. Cut the wires leaving approximately 8" of wire extending from the outlet box.

F. Raise the ceiling canopy and canopy lock ring up the fidure chain and over the canopy chain loop. Tighten the canopy ring onto the canopy chain loop until tight. E. Go to Step 4 for wire connections and follow the directions.

Return to Step F in this step when complete with Step 4.

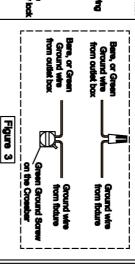


STEP 4 - Install Builbe and Crystal.

A. Place Societ sleeve over societs as shown.

B. Install builbe onto societs and push snug into place.

C. Attach Crystals to the Fbdure Body (A).

SupplyDDWires and **Ground Wire**

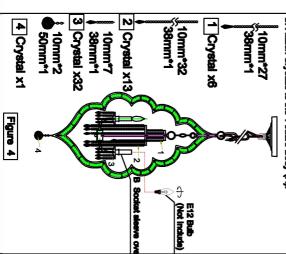

Fixture Loop

圭

Canopy Lock Ring Ceiling Canopy

Figure 2