


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-117FL

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. THREAD TUBE (B) AND TUBE SECTION(C) ONTO LAMP BASE (A) IN TURN.
3. THREAD SHADE SECTION (F) ONTO TUBE (E) OF TUBE SECTION(C)
4. UNSCREW THE NUT (D), ADJUST SHADE SECTION (F) TO APPROPRIATE HEIGHT, THEN SCREW THE NUT (D) TIGHTLY.
5. INSERT THE POLARIZED PLUG INTO OUTLET , TURN ON THE SWITCH AND ENJOY YOUR LAMP.

Use 100 Wattage (Maximum) type A bulb (bulb not included)

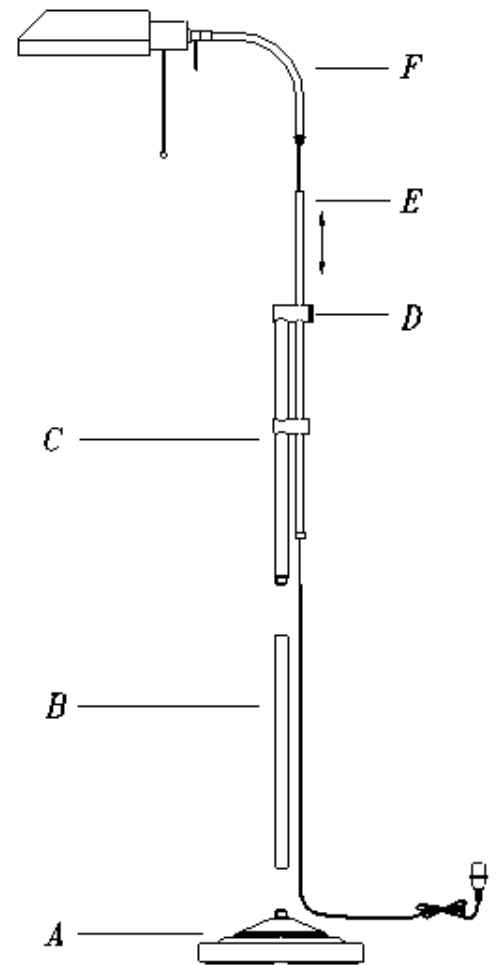

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.