


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2676FL

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. SCREW LAMP BODY SECTION (E) INTO TUBE (D), SCREW TUBE (D) INTO TUBE (C), AND SCREW TUBE (C) INTO TUBE (B).
3. SCREW THE TUBE (B) INTO LAMP BASE (A), KEEP WHOLE LAMP BODY TO BE STRAIGHT.
4. SCREW THE THREADED ROD (F) INTO LAMP BODY SECTION (E). ADJUST THE KNURL NUT (G) ON THE THREADED ROD (F). PUT THE SHADE (H) OVER KNURL NUT (G). THEN TIGHT THE FINIAL (I).
5. INSERT THE POWER PLUG INTO PLUG SEAT TO USE

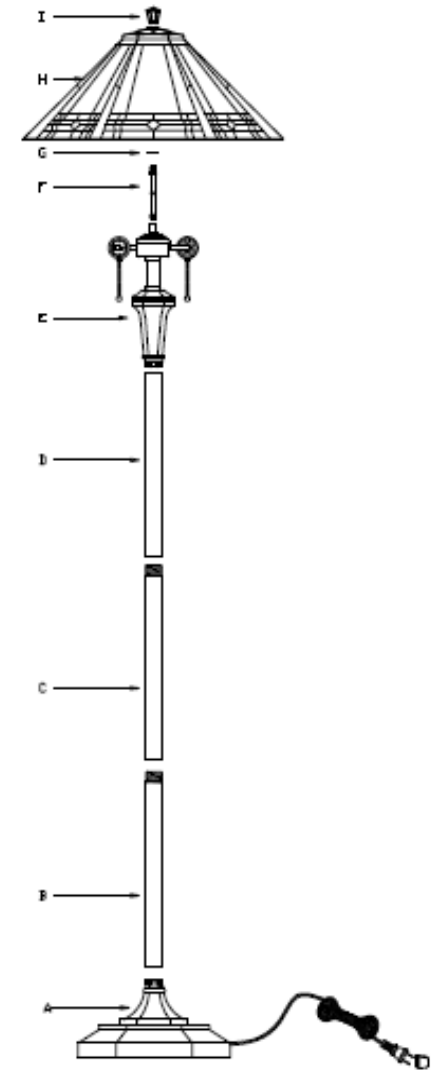

**Recommended (2) maximum 100 WATT Type “A” Bulbs
Or (2) maximum 13WATT CFL Bulbs (Bulbs not included)**

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

