


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2754TB

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
2. INSERT SHADE ONTO THE CUP ON THE BASE AND SECURE WITH SOCKET RING.
4. SCREW BULB INTO THE SOCKET, INSERT THE POWER PLUG INTO PLUG SEAT TO USE.

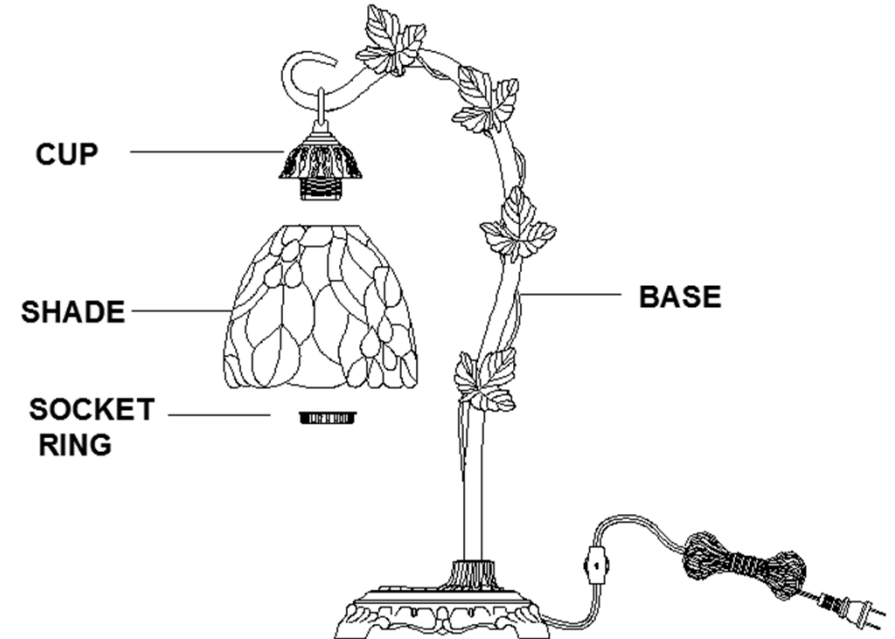

**Recommended (1) maximum 60 WATT Type “A” Bulbs
Or (1) maximum 13WATT CFL Bulbs (Bulbs not included)**

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.