


ASSEMBLY INSTRUCTIONS

ITEM NO: BO-2856FL

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

- 1.SCREW POLE (C) CLOCKWISE INTO POLE (D) TO TIGHTEN.
- 2.SCREW POLE (D) CLOCKWISE INTO POLE (E) TO TIGHTEN.
- 3.SCREW POLE (E) CLOCKWISE INTO CONNECT PART (F) TO TIGHTEN.
- 4.USCREW THE WASHER (H) AND SCREW NET (I) FORM THE THREADED TUBE.
- 5.PLACE THE CONNECT PART (F) INTO THE BASE (G) AND TIGHTEN BY SCREWING NUT (I) , WASHER (H) ONTO THREAD END CLOCKWISE . GET THE REMAINING SLACK OF THE POWER CORD (J) OUT FROM BASE HOLD. MAKE SURE CORD IS FACING THE BACK OF LAMP WHEN TIGHTENING SCREW NUT.
- 6.PUT THE SHADE RING (A) HANDING INTO POTHOOK (B) .
- 7.INSTALL BULB (K) (INCLUDED) INTO THE SOCKET.
- 8.INSERT THE POWER PLUG INTO AN OUTLET AND ENJOY !!

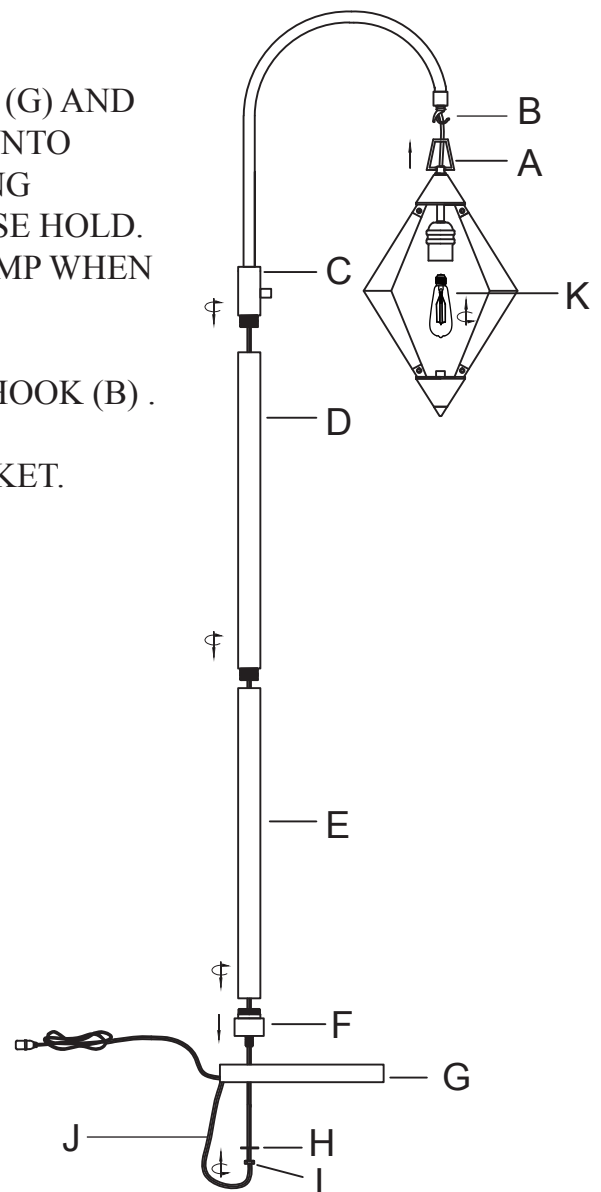

Use MAX 1x60 Wattage type A or 6W LED bulb (6W LED Bulb included)

IMPORTANT SAFETY INSTRUCTIONS:

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.