

# ASSEMBLY INSTRUCTIONS

ITEM NO:BO-2943TB

CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE.

1.SCREW THE THREADED ROD (D) INTO LAMP BODY SECTION (E).

PUT WASHER (C) INTO THE THREADED ROD (D) .


PUT THE SHADE (B) OVER THREADED ROD (D).

THEN TIGHTEN FINIAL (A) SECURING THE SHADE IN PLACE .

2.INSTALL BULB (NOT INCLUDED) INTO THE SOCKET.

3.INSERT THE POWER PLUG INTO AN OUTLET AND ENJOY !!

REPLACEMENT OF NIGHT LIGHT BULB: UNSCREW THE BUTTERFLY NUT(I) FROM THE BOTTOM OF THE BASE(H),SLIGHTLY PULL OUT SOCKET ASSEMBLY(E) FROM THE BASE(H), UNSCREW THE OLD 7W BULB,SCREW NEW 7W BULB INTO THE E12 SOCKET.INSERT BACK THE SOCKET ASSEMBLY(E) INTO THE BASE(I).MAKE SURE THE SCREW POLE ON THE SOCKET ASSEMBLY GO THROUGH THE BASE AND TIGHTEN THE SOCKET ASSEMBLY(E) AND BASE(H) TOGETHER BY BUTTERFLY NUT(I) PULL THE EXTRA CORD OUT OF THE BASE(I).

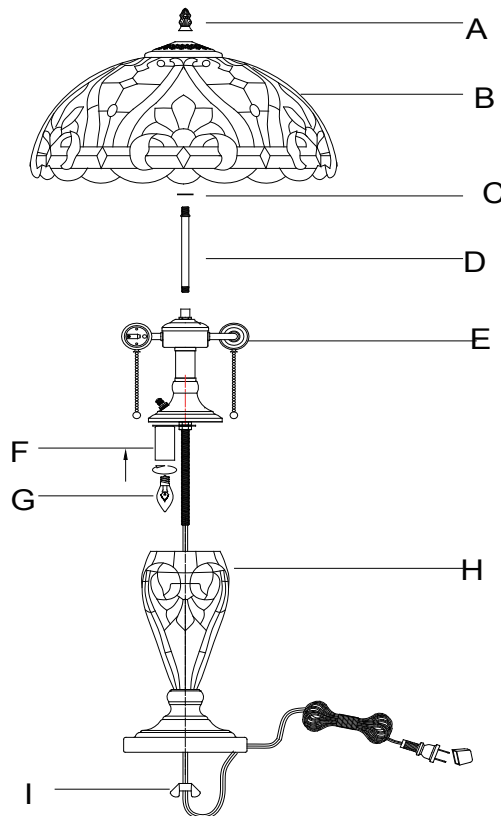

**Use MAX 2 x 60 Wattage type A bulb (bulb not included) for top light**

**Use MAX 1 x 7 Wattage type C bulb (bulb included) for the night light**

**IMPORTANT SAFETY INSTRUCTIONS:**

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

**SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.**