
## **ASSEMBLY INSTRUCTIONS:**

## **ITEM NO.: BO-635**

- 1. Carefully unpack and lay out the parts as shown in illustration.
- 2. Drill two level holes to the wall and place the plastic anchor (G) into it.
- 3. Screw the eight diagram plate (E) onto the wall with screw (F).
- 4. Place the lamp body (A) into the eight diagram plate (E) with nut (D).
- 5. Insert the harp (B) into the saddle of the lamp body (A).
- 6. Put the shade (not included) onto the harp (B) then screw it with finial (C).
- 7. Place the wire cover (J) along the wire, then drill six holes and place plastic anchor (H) into it.
- 8. Fix the wire cover (J) into the wall with wood screw (I), then put the wire (L) straight in the wire cover (J).
- 9. Place the upper wire cover (K) onto the bottom wire cover (J) to right way.
- 10. Insert the polarized plug into wall outlet, turn on the switch.
- 11. Use 60 W (Maximum) TYPE A Bulb (Bulb not included) . Install Bulb into the socket and enjoy your new lamp.

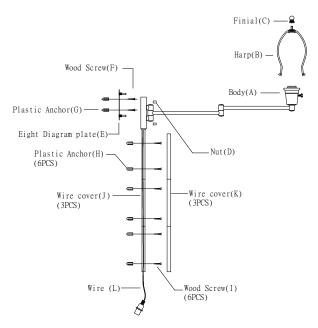

## **IMPORTANT SAFETY INSTRUCTIONS:**

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY AND EASILY INSERTED. DO NOT ATTEMPT TO ALTER THE PLUG.

## SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.