
## **ASSEMBLY INSTRUCTIONS**

### ITEM NO: LA-60002W2L-1

#### THE LAME HAVE TWO OF MEANS TO ASSEMBLE: THIS IS PORTABLE.

- CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LAY THEM UP AS PER THE SKETCH.
- DRILL FOUR LEVEL HOLES TO THE GROUND AND PLACE THE PLASTIC ANCHOR (A) INTO IT.
- 3. SCREW THE EIGHT DIAGRAM PLATE (C) ONTO THE WALL WITH WOOD SCREW (B).
- 4. PLACE THE LAMP BODY (G) INTO THE EIGHT
  DIAGRAM PLATE (C) THROUGH THE NIPPLE (D) WITH
  NUT (D) AND CLARITY PLASTIC WASHER (E).
- 5. INSERT THE HARP (H) INTO THE SADDLE OF THE LAMP BODY (G).

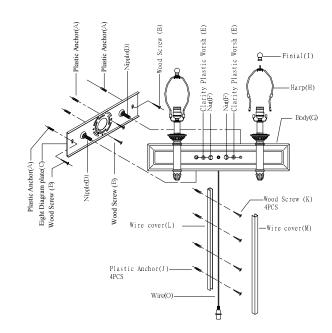

- 6. PUT THE SHADE (NOT INCLUDED) ONTO THE HARP (H) THEN SCREW IT WITH FINIAL (I).
- 7. PLACE THE WIRE COVER (L) ALONG THE WIRE, THEN DRILL FOUR HOLES AND PLACE PLASTIC ANCHOR (J) INTO IT.
- 8. FIX THE WIRE COVER (L) INTO THE WALL WITH WOOD SCREW(K), THEN PUT THE WIRE (O) STRAIGHT IN THE WIRE COVER (L).
- 9. PLACE THE UPPER WIRE COVER (M) ONTO THE BOTTOM WIRE COVER (L) TO RIGHT WAY.
- 10. INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

**WATTAGE**: 2\*60W TYPE A (EX BULB)

# **IMPORTANT SAFETY INSTRUCTIONS:**

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACTA QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

### SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

325347B