


ASSEMBLY INSTRUCTIONS

ITEM NO:LA-60006FL-2

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH SURFACE AND LINE THEM UP AS PER THE SKETCH.
2. SCREW POLE (B) ONTO BASE (A), POLE (C) ONTO POLE (B),POLE (D) ONTO POLE (C), THEN SCREW SOCKET SECTION (E) ONTO POLE (D).
- 3.INSERT HARP (F) INTO THE SADDLE, THEN PUT THE SHADE (NOT INCLUDED) ONTO THE HARP (F).
4. SCREW FINIAL (G) ONTO THE HARP (F) TO FASTEN THE SHADE (NOT INCLUDED). INSTALL BULB (NOT INCLUDED) INTO THE SOCKET.
- 5.INSERT THE POLARIZED PLUG INTO WALL OUTLET, TURN ON THE SWITCH AND ENJOY YOUR NEW LAMP.

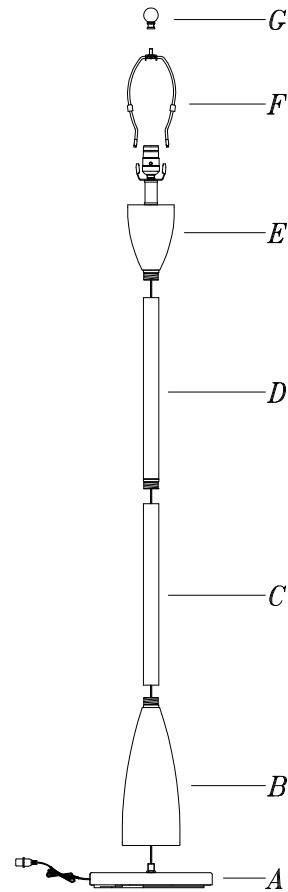

WATTAGE: TYPE A 100W (BULB NOT INCLUDED)

IMPORTANT SAFETY INSTRUCTIONS:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS THE PLUG CAN BE FULLY INSERTED.

DO NOT ALTER THE PLUG.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.