


CRYSTORAMA

95 Cantiague Rock Road, Westbury NY 11590
ph:516.931.9090 fax:516.931.1254
info@crystorama.com www.crystorama.com

MODEL#: 2262-PN ASSEMBLY AND DRESSING INSTRUCTIONS

IMPORTANT

TURN OFF THE POWER AT THE MAIN
FUSE OR CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

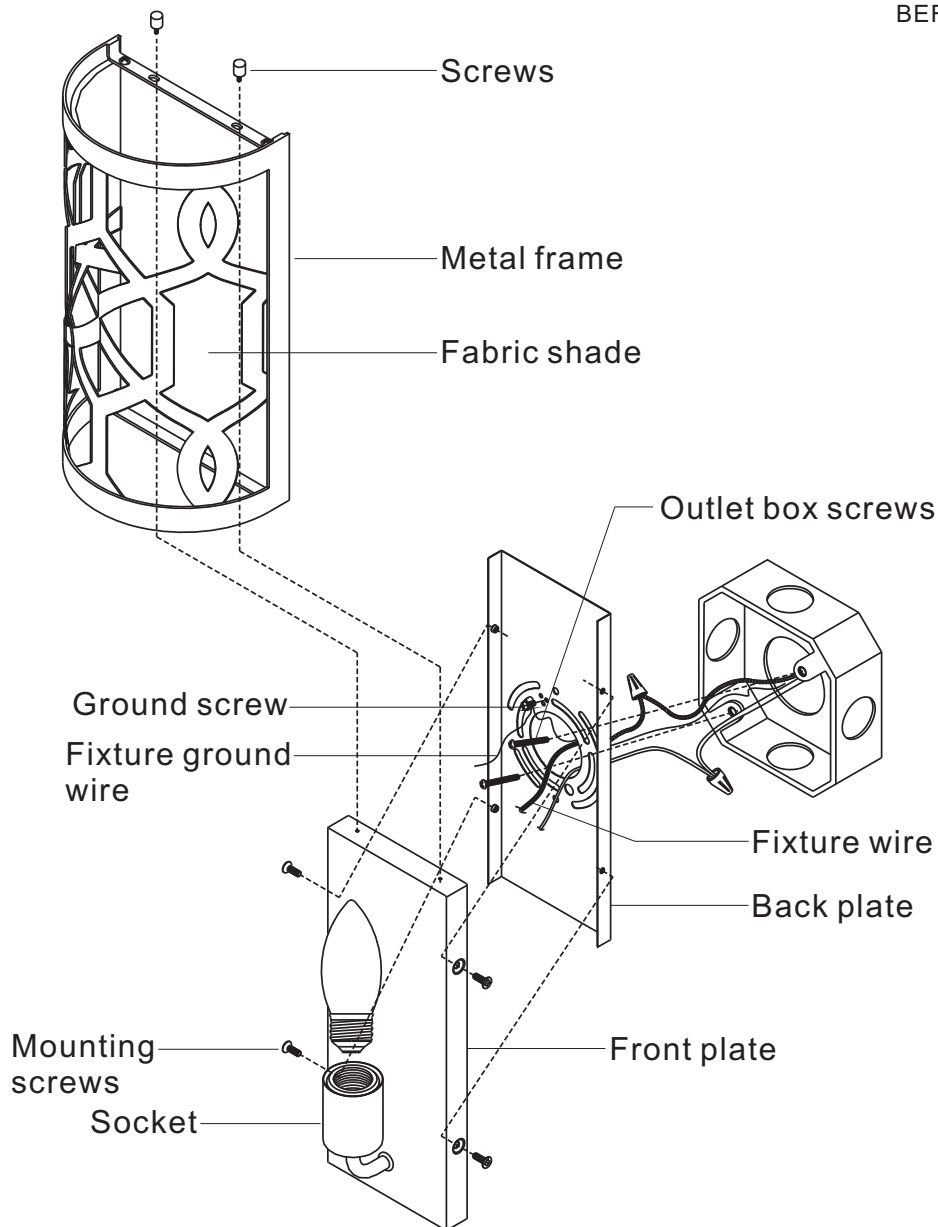

You will need 1-Med. Torpedo
BULB 40 watts Recommended
60 watts Max
Bulb not included

For Type B bulb only

