

1. Turn breaker off for circuit on outlet where fixture is to be installed.
2. Install mounting bracket to electrical box
3. Wire input wires of driver transformer on fixture to wires in outlet box.
4. Connect copper ground wire to ground wire in electrical box.
5. Install fixture to bracket and tighten nuts so that fixture is secure

The fixture is designed to dim with a standard Triac forward phase dimmer. Dimming levels will vary by dimmer.

Below is a list of recommended dimmers:

Lutron MACL-153M  
Lutron DVL-153P  
Lutron SCL-153P  
Leviton IPL06-10Z  
Leviton 6674-POW

**Due to the inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.**

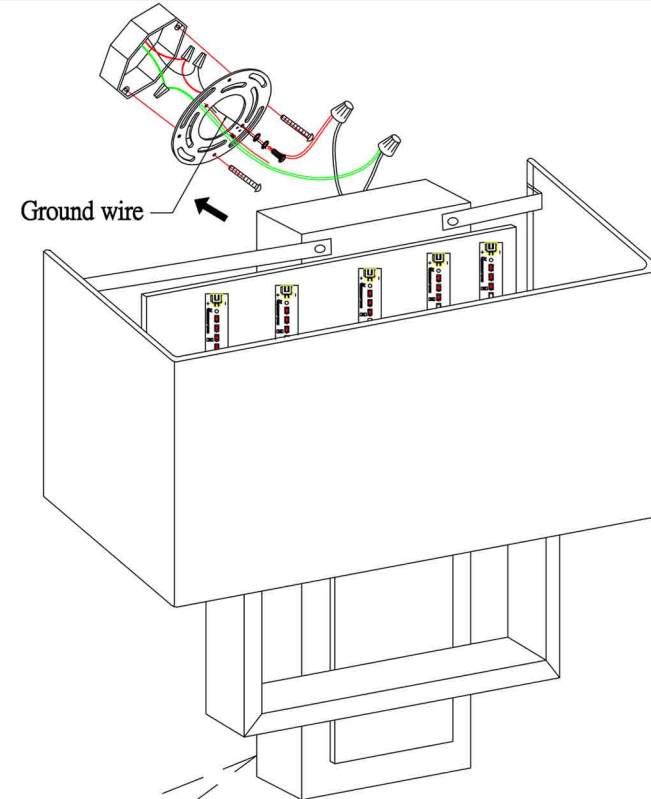


Diagram A

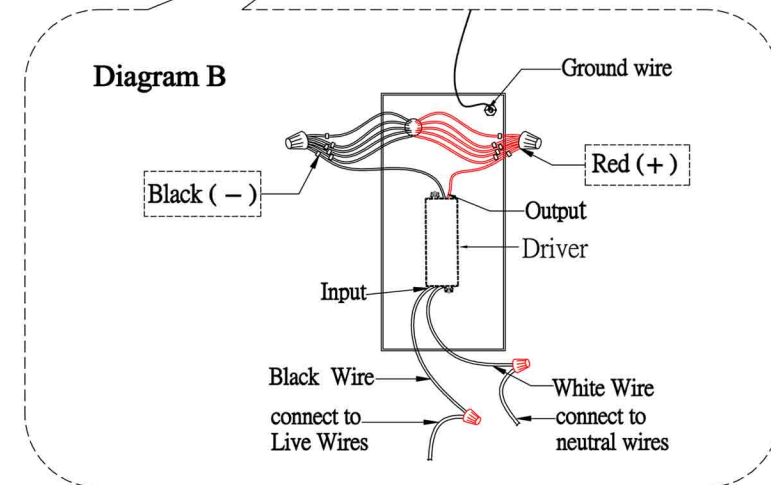


Diagram B