


Contemporary Lighting

PRODUCT NAME: Hoops ITEM NUMBER: E22716-PC

Please consult your electrician for hanging fixture and wiring.

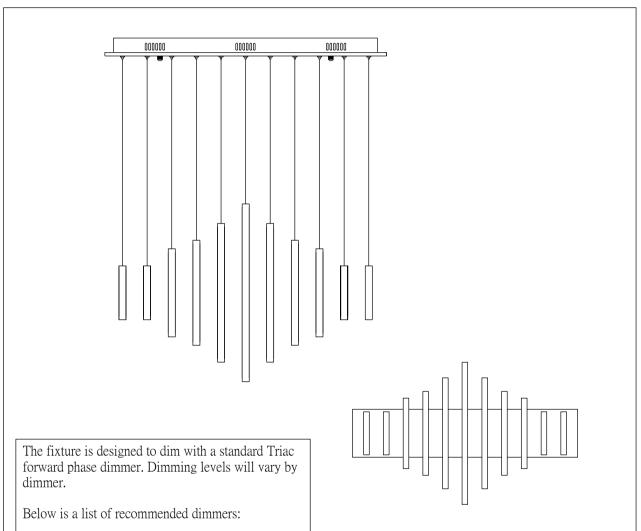

Lutron MACL-153M

Lutron DVL-153P

Lutron SCL-153P


Leviton IPL06-10Z

Leviton 6674-POW


Due to inrush current wattage should not exceed 150 watts of product for a 600 watt dimmer.


Warning! This fixture is supplied with an installed LED driver. Wires MUST be connected to driver found in canopy and NOT DIRECTLY TO POWER SOURCE or a short might occur.

IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation

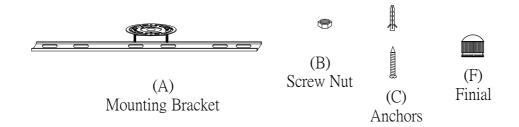

Locate all hardware & components before discarding packaging

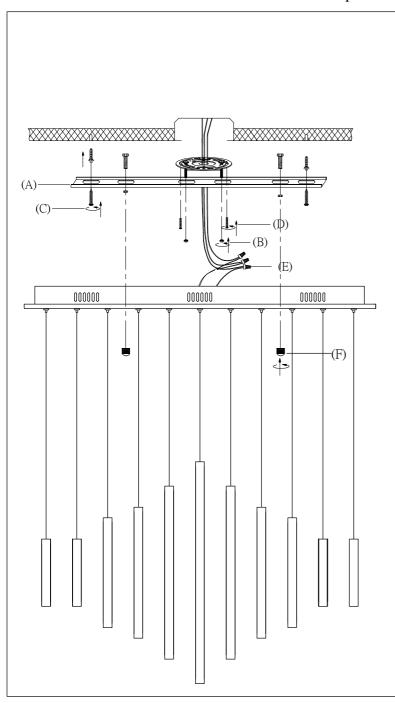




Step.1: Remove mounting bracket from fixture and install to electrical box using screws (D). Mark where screws at ends of bracket (A) meet the ceiling. Remove mounting bracket (A) from ceiling. Drill holes using 3/16"± drill bit where marked. Install mounting bracket (A) to outlet box by attaching anchors (C) and screw nuts (B) to secure bracket at ends.



Step.2: Wire fixture to wires (E) in outlet box. Copper wire is for Ground.



Step.3: Adjust wire length to desired mounting height, and tighten strain relief screws to secure. Install fixture to bracket and tighten screws (F) at the ends of the canopy to secure.

Cleaning & Care:

Clean with soft cloth and a mild detergent. Do not use abrasive cleaner.