

Karma Pendant 137835

### **Component Parts**

Α	Crossbar
---	----------

B Canopy

C Center Knob

D Gripper (2)

E Supply/Support Cable (2)

F Fixture

G Anchors (7)

H #10 Screws (7)

I Safety Cable

J #8 Screw

K Ground Screw

L Cupped Washer

M Nipple

N Socket

O Cap

P Large Glass

Q Spacer Tube

R Retaining Ring

S Retaining Ring Tool

T Small Glass

#### ASSEMBLY & INSTALLATION INSTRUCTIONS



Karma Pendant 137835

**CAUTION:** FAILURE TO INSTALL THIS FIXTURE PROPERLY MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH AND PROPERTY DAMAGE. We recommend installation by a licensed electrician. This product must be installed in accordance with applicable installation code(s), by a person familiar with the construction and operation of the product and the hazards involved.\*

Caution: Do not exceed maximum wattage noted on fixture. Use only recommended bulbs with fixture.

Please Note: After installation extra hardware and accessories are possible; our kits are used on multiple products.

### **To Attach to Ceiling** (Figure 1 on following page)

CAUTION: BE SURE POWER IS OFF AT THE MAIN BREAKER BOX PRIOR TO INSTALLATION.

- 1. Carefully unpack the fixture from the carton.
- 2. Crossbar (A) is shipped installed in canopy (B). Remove center knob (C) to separate crossbar and canopy. Retain for use later.
- 3. Height of fixture (F) can be set prior to attaching canopy (B) to the ceiling.

**NOTE:** Fixture is shipped at max height

- 4. Push supply/support cable (E) into canopy gripper (D) until desired height is reached. Repeat for remaining supply/support cable.
- 5. Center the crossbar (A) over the electrical box. With a pencil, mark the location of all mounting holes in the crossbar on the ceiling.
- 6. Put the crossbar (A) down. If using only the #10 screws (H), drill 1/8" holes in locations marked on ceiling. If using anchors (G) and screws (H), drill 1/4" holes in the locations marked on the ceiling. Place the tapered end of the anchors into the holes and gently tap them flush to the ceiling using a light weight hammer.
- 7. Thread the wires in the electrical box through the center hole in the crossbar (A) while moving it into position. Using the #10 screws (H), screw the crossbar securely to the ceiling. Be careful not to over-tighten or strip the anchors.
- 8. Raise canopy (B) close to crossbar (A). Attach safety cable (I) to crossbar using the #8 screw (J), from mounting kit, to temporarily support fixture while wiring.

**CAUTION:** The cable is intended to temporarily suspend canopy while wiring connections are completed.

9. Using suitable wire connectors (not provided) connect fixture wires to supply wires (white to white, black to black). Attach a pigtail lead to ground screw (K) and cupped washer (L). Connect all ground wires (bare copper or green to bare copper or green). Ground screw and cupped washer are shipped in the mounting kit bag.

CAUTION: MAKE SURE WIRE CONNECTORS ARE TWISTED ON SECURELY, AND NO BARE WIRES ARE EXPOSED.

10. Slide canopy (B) over nipple (M) and secure with center knob (C).


**NOTE:** Be sure not to catch any wires when sliding canopy over nipple and no wires are pinched between the canopy and the ceiling.

11. If fixture needs to be lowered to achieve desired height, push up on canopy gripper (D) and gently pull down on supply/support cable (E).



Karma Pendant 137835

# To Attach to Ceiling (Figure 1)

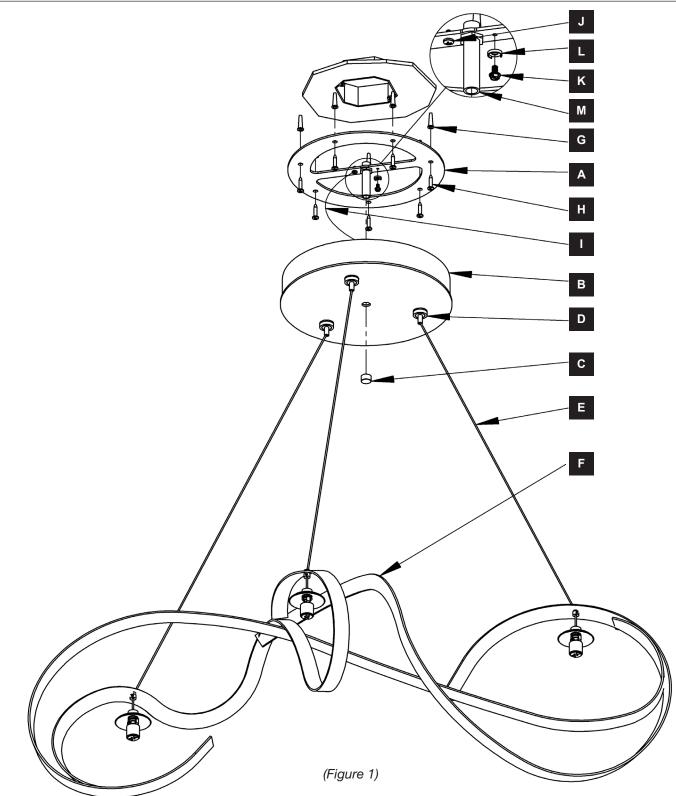



MODERN AMERICAN BLACKSMITHS | FINE, HAND CRAFTED LIGHTING CASTLETON, VERMONT USA | HUBBARDTONFORGE.COM


Karma Pendant 137835

### To Install Single Glass Option (Figure 2)

- Retaining rings (R) are shipped installed. Remove from socket (N) and retain for later use.
- 2. Install bulbs (not provided) into socket (N).
- Slide large glass (P) over socket (N), followed by spacer tube (Q).
- 4. Using retaining ring tool (S), thread retaining ring (R) onto socket (N) and tighen glass (P) to cap (O).

**NOTE:** Be careful not to overtighten ring and break glass.

- 5. Repeat steps 1 3 for remaining sockets (N).
- 6. Restore electricity at main breaker.

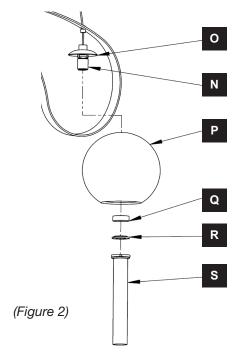


## To Install Double Glass Option (Figure 3)

- Retaining rings (R) are shipped installed. Remove from socket (N) and retain for later use.
- 2. Install bulbs (not provided) into socket (N).
- 3. Slide large glass (P) over socket (N), followed by spacer tube (Q).
- 4. Using retaining ring tool (S), thread retaining ring (R) onto socket (N) and tighen glass (P) to cap (O).

**NOTE:** Be careful not to overtighten ring and break glass.

- 5. Thread small glass (T) onto socket (N) until snug. Do not overtighten.
- 6. Repeat steps 1 4 for remaining sockets (N).
- 7. Restore electricity at main breaker.

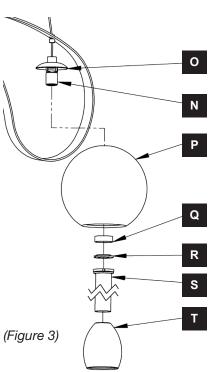

If you need further assistance, or find that you are missing any parts, please contact the dealer from which you purchased this product. We hope you enjoy your fixture!

\* Hubbardton Forge will not be liable for injury or damage caused by improper installation, lamping or use of this fixture.

