


C62601

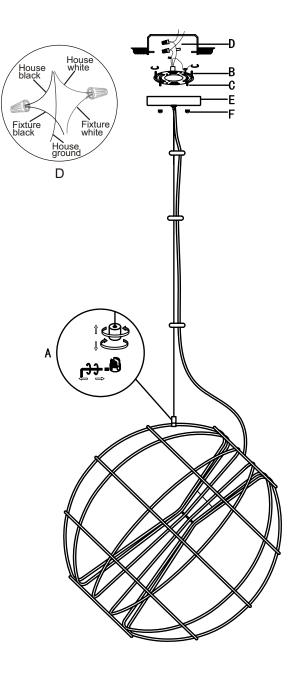

INSTALLATION INSTRUCTIONS:

- Ensure main supply is switched off.
- Adjust location of the lock catch as you like (A).
- Fit mounting bracket (B) onto outlet box with self-tapping screws (C).
- Connect wires (D) according to color (White to White, Black to Black). Connect all earth plug together onto the crossbar with green screw to tight.
- Fit ceiling plate (E) onto mounting bracket with nuts (F).
- Reconnect power.

WARNING:

- This fitting must be earthed.
- Disconnect power and allow fitting to cool down before cleaning or changing the lamp.

www.matteolighting.com

MATTEO LIGHTING