


MERIDIAN

LITE TRENDS

ITEM NO: M70113MBK
M70113NB
M70113PN

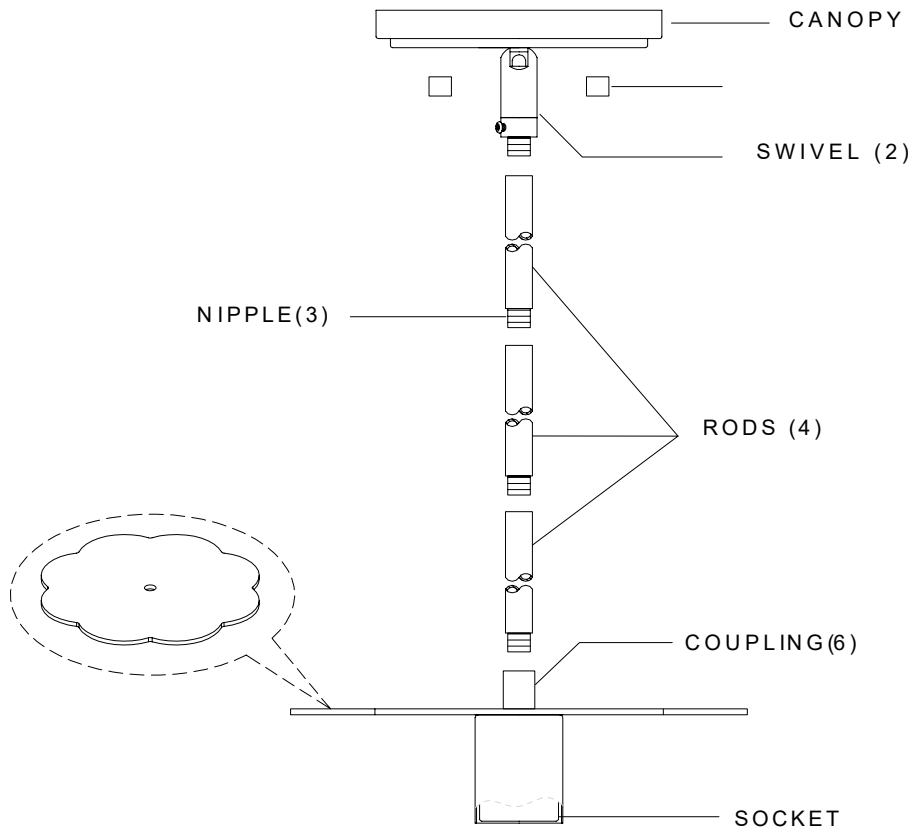

ASSEMBLY INSTRUCTIONS

1. Carefully unpack and identify all parts referring to illustration for parts identification.
2. Turn the power to the installation point OFF.
3. Assemble the rods (4) together using the nipple (3). Attach the bottom end of the rods (4) into the coupling (6) tightly. Attach the top end of the rods (4) into the swivel (2).
4. Refer to the additional installation instructions included with the product for wiring and installation.
5. Install proper bulbs (not included) into each socket referring to the markings and/or labels on the fixture for maximum wattage.
6. Restore power to the installation point and retain this sheet for future reference.