


# ASSEMBLY INSTRUCTIONS FOR 17209 (MS252-39P-1-M257)

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

1. Turn off power to J-Box.
2. Attach crossbar with threaded rod to J-Box.
3. Place canopy with shade attached to J-Box onto threaded rod and attach with finial. Do not tighten canopy to ceiling with finial.
4. Wire as per local electrical code.
5. Tighten canopy to ceiling with finial.
6. Turn on power to J-Box.

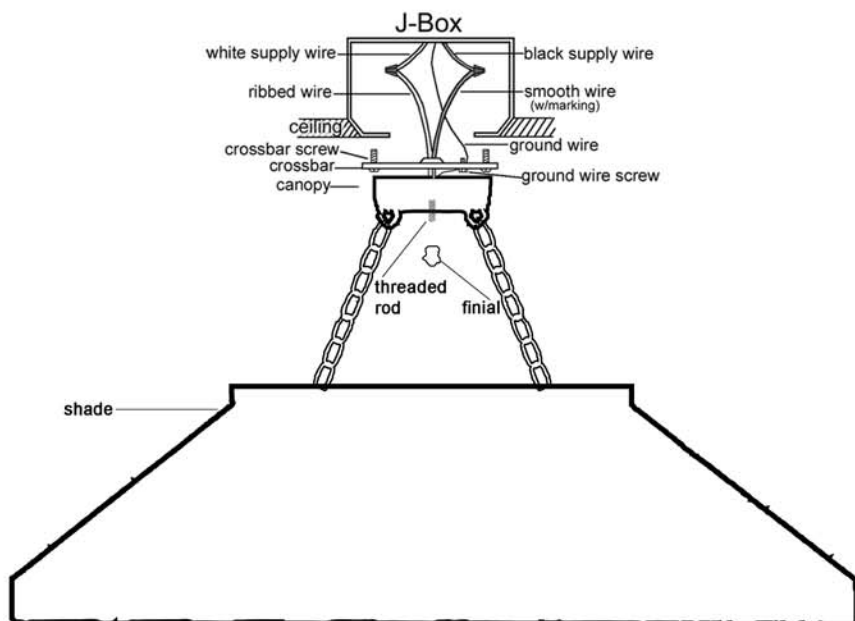

*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)