

ASSEMBLY INSTRUCTIONS FOR M46

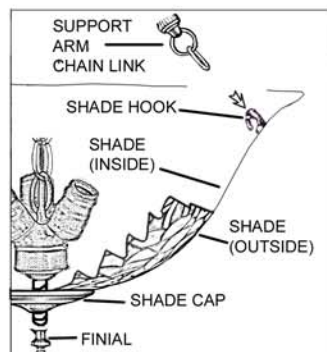
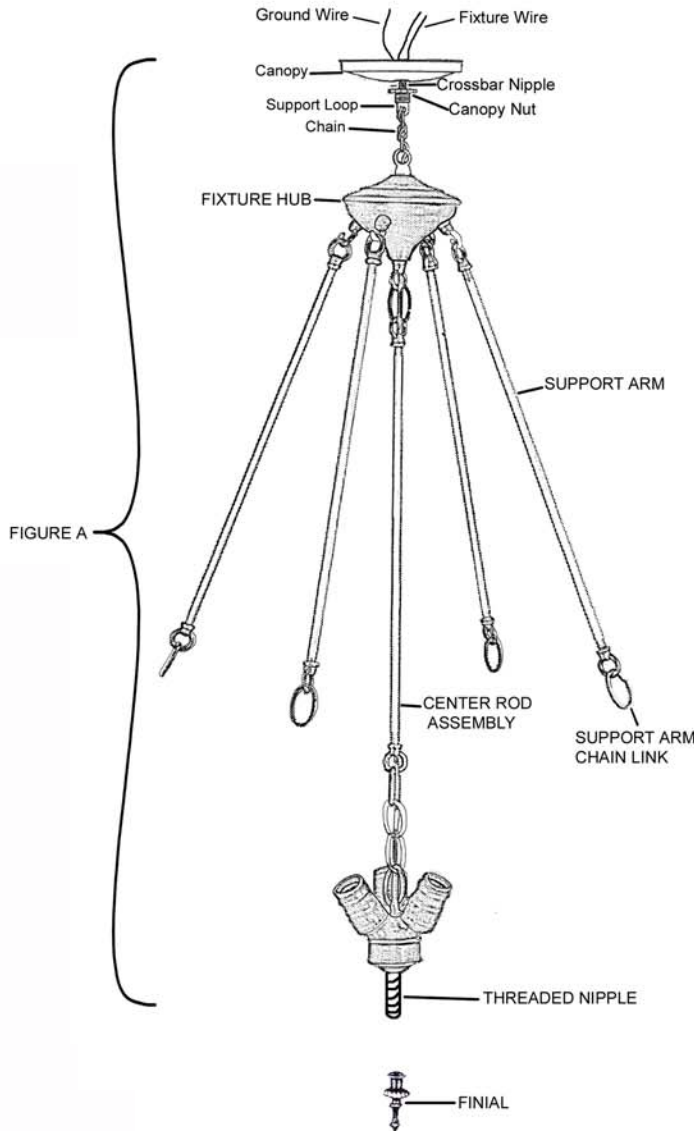


FIGURE B

IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED

Use these instructions for standard and custom M46 fixtures. The sizes listed here represent our standard models.

1. Assemble fixture as shown in FIG.A
 2. Install assembled fixture FIG.A to ceiling. Pull fixture wire with Ground wire through crossbar nipple carefully. (Follow procedure shown shown in Electrical Connection instructions)

NOTE: This fixture is custom fitted to each shade. There will be fine adjustments you will be required to make.

3. Attach support arm chain link(4) to shade hook, (4) Fig.B. Place center rod assembly (threaded nipple) through hole in center of shade cap, FIG.B. Attach finial. NOTE: Center arm assembly holds the weight of the shade only. Support arms are used for shade balance.

4. Screw finial up or down to fine tune tension of arm assembly.

ELECTRICAL CONNECTIONS:

1. Cut excess wire ABOVE crossbar to 6'. Split the wire into 2 separate leads. Strip 1" of plastic insulator from the ends of each lead.
 2. Connect the half of wire w/the ribbed surface to the white wire of the supply box. Connect the smooth half of wire(the half w/markings) to the black wire of the supply box. connect the bare copper Ground wire to the green screw of the crossbar. Use UL listed wire connectors suitable for the size, type and number of conductors. No loose strands or loose connections should be present. Secure wire connectors w/ electrical tape.

Other models include: #21040 M46-27
 #20396 M46-30, #20526 M46-34,
 #20517 M46-36, #21045 M46-42



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com