


ASSEMBLY INSTRUCTIONS FOR #51565 (SG617-14-2-PRS20)

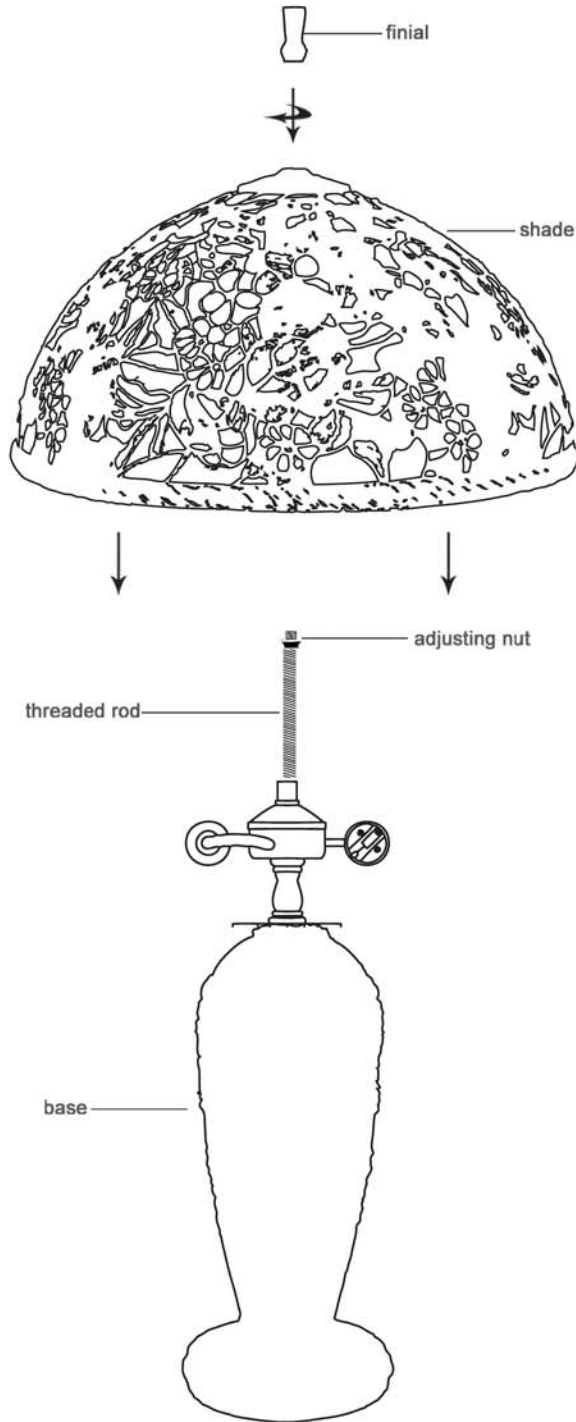

IMPORTANT
 CAREFULLY UNPACK AND IDENTIFY ALL
 PARTS BEFORE ASSEMBLY. BULBS ARE
 NOT INCLUDED

1. Screw bulbs(2) into sockets.
2. Place shade onto base threaded rod and seat on to adjusting nut.
3. Screw finial onto threaded rod and tighten.



"A Commitment to Excellence in Lighting and Service"

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at www.meyda.com