


# ASSEMBLY INSTRUCTIONS FOR 56745 (M102-SG695PRF-1)

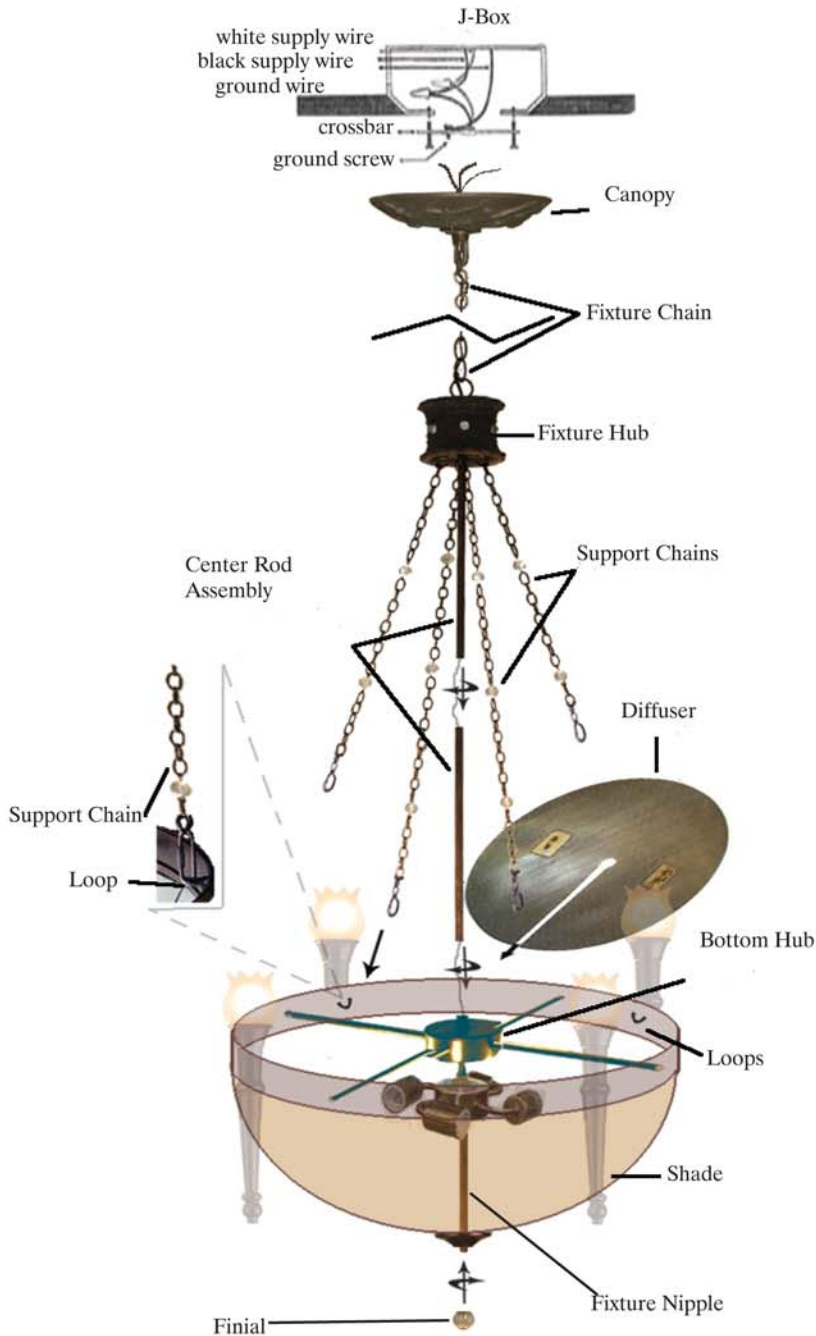

## IMPORTANT

TURN OFF THE POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE STARTING INSTALLATION

CAREFULLY UNPACK AND IDENTIFY ALL PARTS BEFORE ASSEMBLY. BULBS ARE NOT INCLUDED.

1. Screw center rod assembly together. FIG. A
2. Screw center rod assembly into fixture hub. FIG. A
3. Screw center rod assembly with fixture hub into bottom hub. FIG.A
4. Screw finial onto fixture nipple. FIG.A
5. Attach (3) support chains to loops located on interior of shade hub. FIG.A
6. Place light bulbs into fixture sockets. FIG.A
7. Place diffuser screen onto top of shade hub. FIG.A (Line up slot in diffuser with center rod)
8. Attach remaining support chain to loop located on interior of shade hub. FIG. A
9. Attach canopy with fixture to J-Box. FIG.A (Wire as per local electrical code)
10. Screw cndl. bulbs into torch arm sockets. FIG. B
11. Screw torch shades (4) into torch arms. FIG. B



Cndl. Bulb



Torch Arm Socket

Torch Arm

Fig B



*"A Commitment to Excellence in Lighting and Service"*

CALL OUR CUSTOMER SERVICE DEPARTMENT AT 1-800-222-4009

MONDAY - FRIDAY 8:00 a.m. - 6:00 p.m. ET

visit us on the web at [www.meyda.com](http://www.meyda.com)