

## Installation Guide For Styles OST1608EK and OST1608W

# Tools Required


# 12W LED


# Warnings and Cautions Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

#### Package Contents

**Preparation**: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

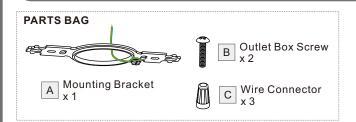

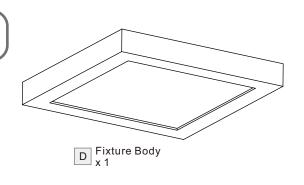

### Table of Contents

