



Installation Guide For Styles PAD8608C

Tools Required

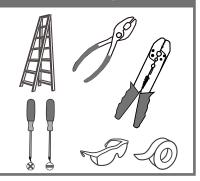

Light Source



1BULBS REQUIRED BULBSNOTINCLUDED

G9 Forsted Xenon Bulb

$oldsymbol{\Delta}$ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG




Mounting Screw



Outlet Box Screw



Wire Connector



Inner Backplate




Fixture Body



Shade F x 1


Table of **Contents**

Inner Backplate



STEP 1

Wiring




STEP 2

Fixture Body





STEP 3


Shade & Bulb



STEP 4

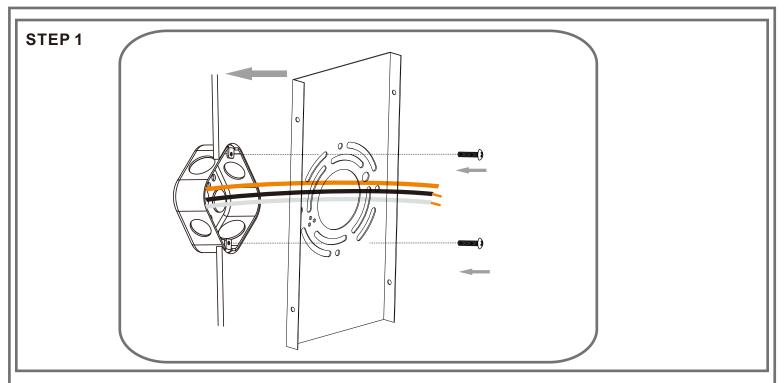

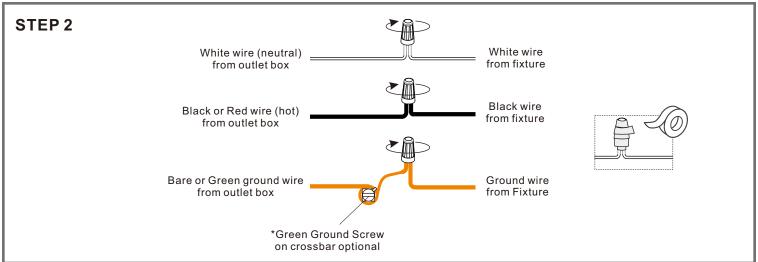

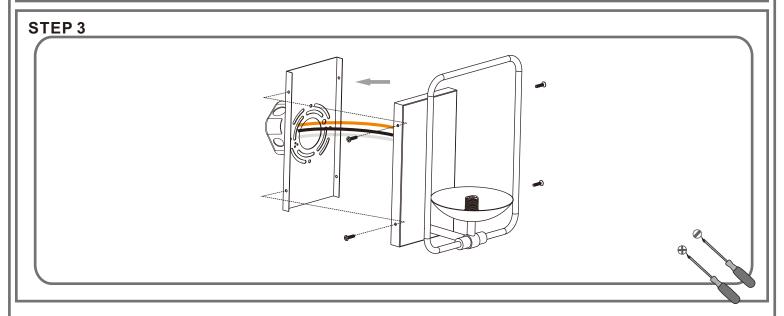

STEP 4

